



CATALOG OF REPLACEMENT PARTS




SG & SU SERIES UNDERCOUNTER DISHWASHERS

ML-130273	SU-H
ML-130274	SU-L
ML-130259	SG (Cold)
ML-130260	SG (Cold)

A product of The Stero Company 1758 Corporate Circle Petaluma, CA 95476

Table of Contents

 
7	BASE ASSEMBLY (SG)
9	BASE ASSEMBLY (SU-H & SU-L)
11	TANK ASSEMBLY
13	DOOR ASSEMBLY (SG)
15	DOOR ASSEMBLY (SU-H & SU-L)
17	CONTROL PANEL AND BOARDS
19	WASH ARM AND RINSE ARM ASSEMBLY
21	WASH PIPE ASSEMBLY
23	WASH PUMP AND DRAIN
25	DRAIN WATER TEMPERING
27	RINSE PUMP
29	CHEMICAL PUMPS AND SENSORS
31	BOOSTER ASSEMBLY (HOT) (SU-H)
33	RECOVERY TANK ASSEMBLY (COLD) METAL TANK (SU-L & SG)
35	RECOVERY TANK ASSEMBLY (COLD) MOLDED TANK (SU-L & SG)
37	FILL AIR GAP (SU-H & SU-L)
39	FILL AIR GAP (SG)

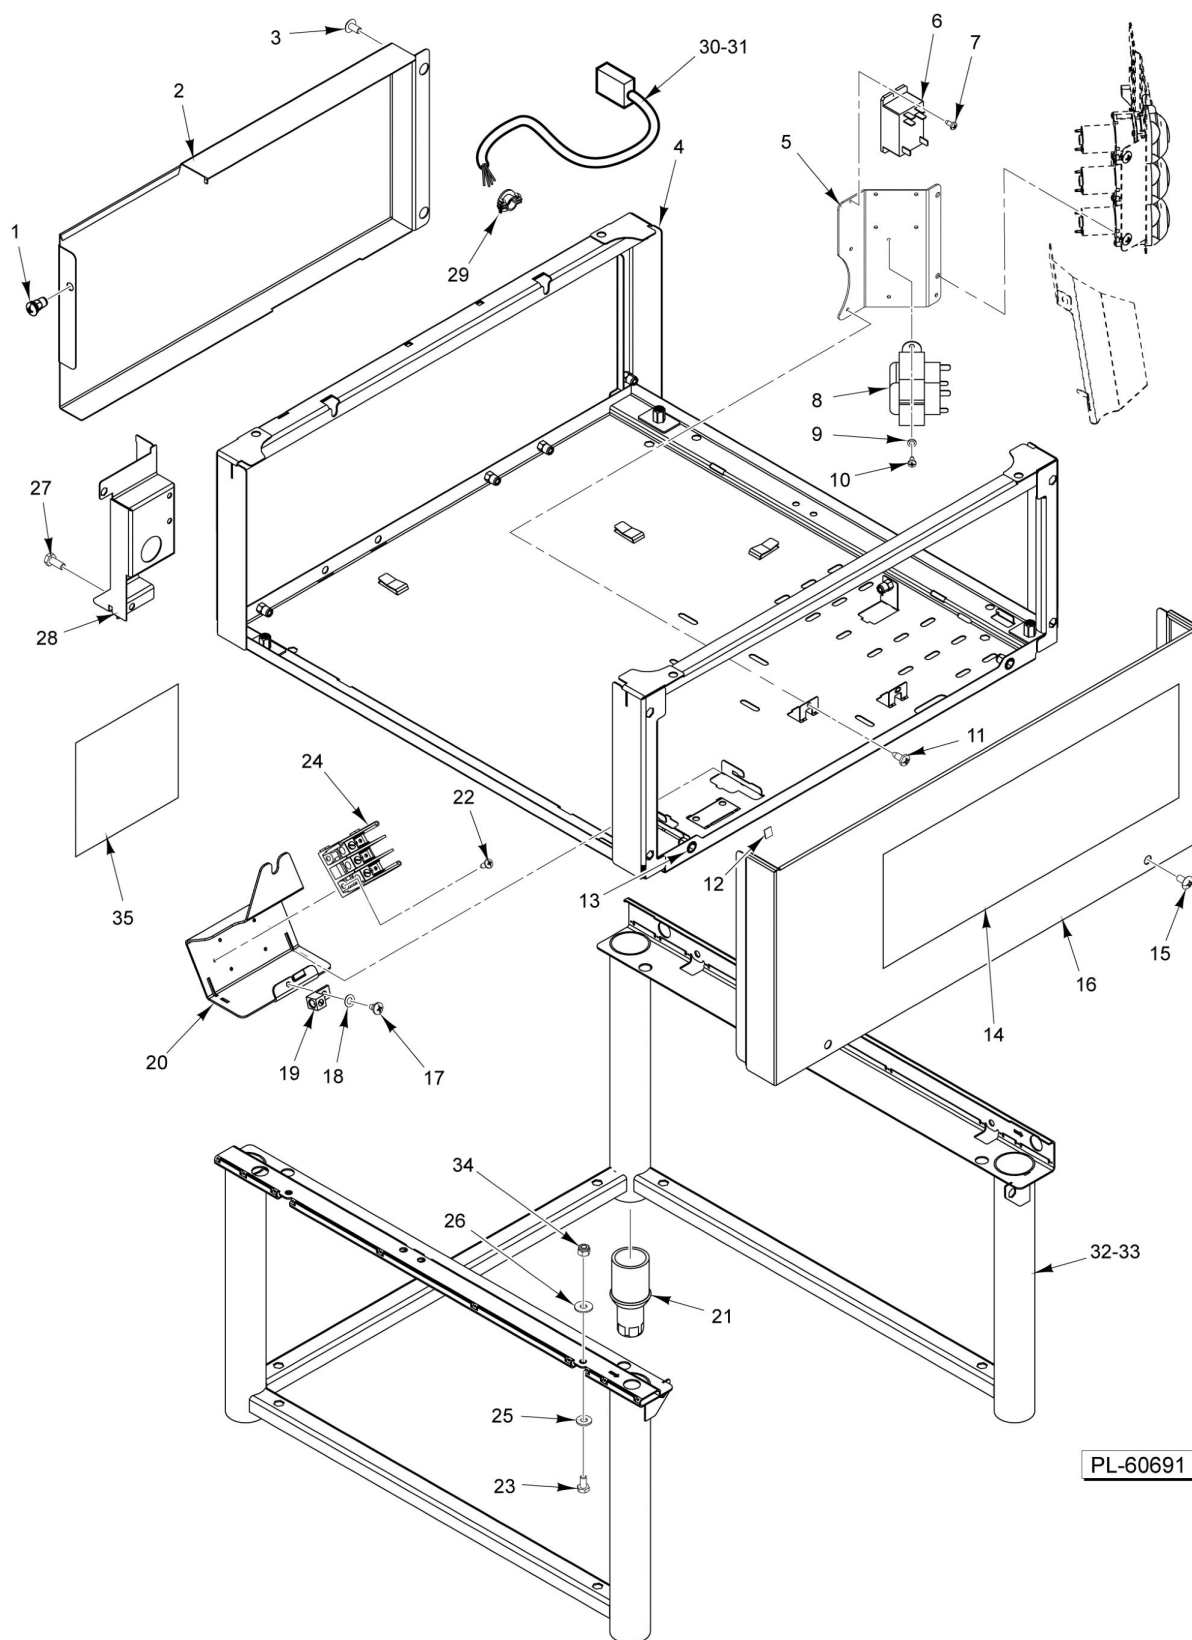

BASE ASSEMBLY (SG)

BASE ASSEMBLY (SG)


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60691			
1	0P-678345	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	1
2	0A-108523	Panel - Cover (Rear).....	1
3	0P-678345	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	2
4	0A-108424	Base - Lower (Control Box).....	1
5	0A-108428	Bracket - Contactor.....	1
6	0P-478361	Relay (2-Pole) (120 VAC) (30 Amp.).....	1
7	0P-678160	Self-Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B.....	2
8	0P-538484	Transformer (24 V., 30 Amp.).....	1
9	0P-678163	Lockwasher #10 Helical (SST).....	2
10	0P-678160	Self-Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B.....	2
11	0P-678161	Self-Tapping Screw 10-16 x 1/2 Phil. Pan Hd., Type B.....	2
12	0A-698551	Label - Ground.....	1
13	0P-678390	Rivnut 1/4-20.....	AR
14	0A-698583	Label (Cleaning).....	1
15	0P-678345	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	2
16	0A-108514	Trim - Front.....	1
17	0P-678348	Self-Tapping Screw 1/4-20 x 3/8 Phil. Pan Hd., Type TT.....	1
18	0P-678351	Lockwasher 1/4 External Shakeproof.....	1
19	0P-528186	Lug - Grounding.....	1
20	0A-108539	Bracket.....	1
21	0P-608040	Foot - Adjustable (1-5/8) (SST).....	4
22	0P-678160	Self-Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B.....	2
23	0P-678568	Cap Screw 1/4-20 x 1/2 Hex Hd. (SST).....	8
24	0P-528457	Block - Terminal (3-Pole).....	1
25	0P-678170	Washer (SST).....	8
26	0P-678575	Washer (SST).....	4
27	0P-678568	Cap Screw 1/4-20 x 1/2 Hex Hd. (SST).....	1
28	0A-108429	Box - Junction.....	1
29	0P-678560	Connector - Conduit.....	1
30	0A-108510	Kit - Power Cord Cord - Power (120 V.).....	1
31	0A-108512	Kit - Power Cord 120/208-240 V., 3 Wire.....	1
32	0B-108516	Frame (Standard).....	1
33	0B-108517	Frame (Short).....	1
34	0P-678143	Stop Nut 1/4-20 Hex (SST).....	4
35	0A-698553	Electric Diagram (120 V., 60 Hz., 1 Ph.).....	1

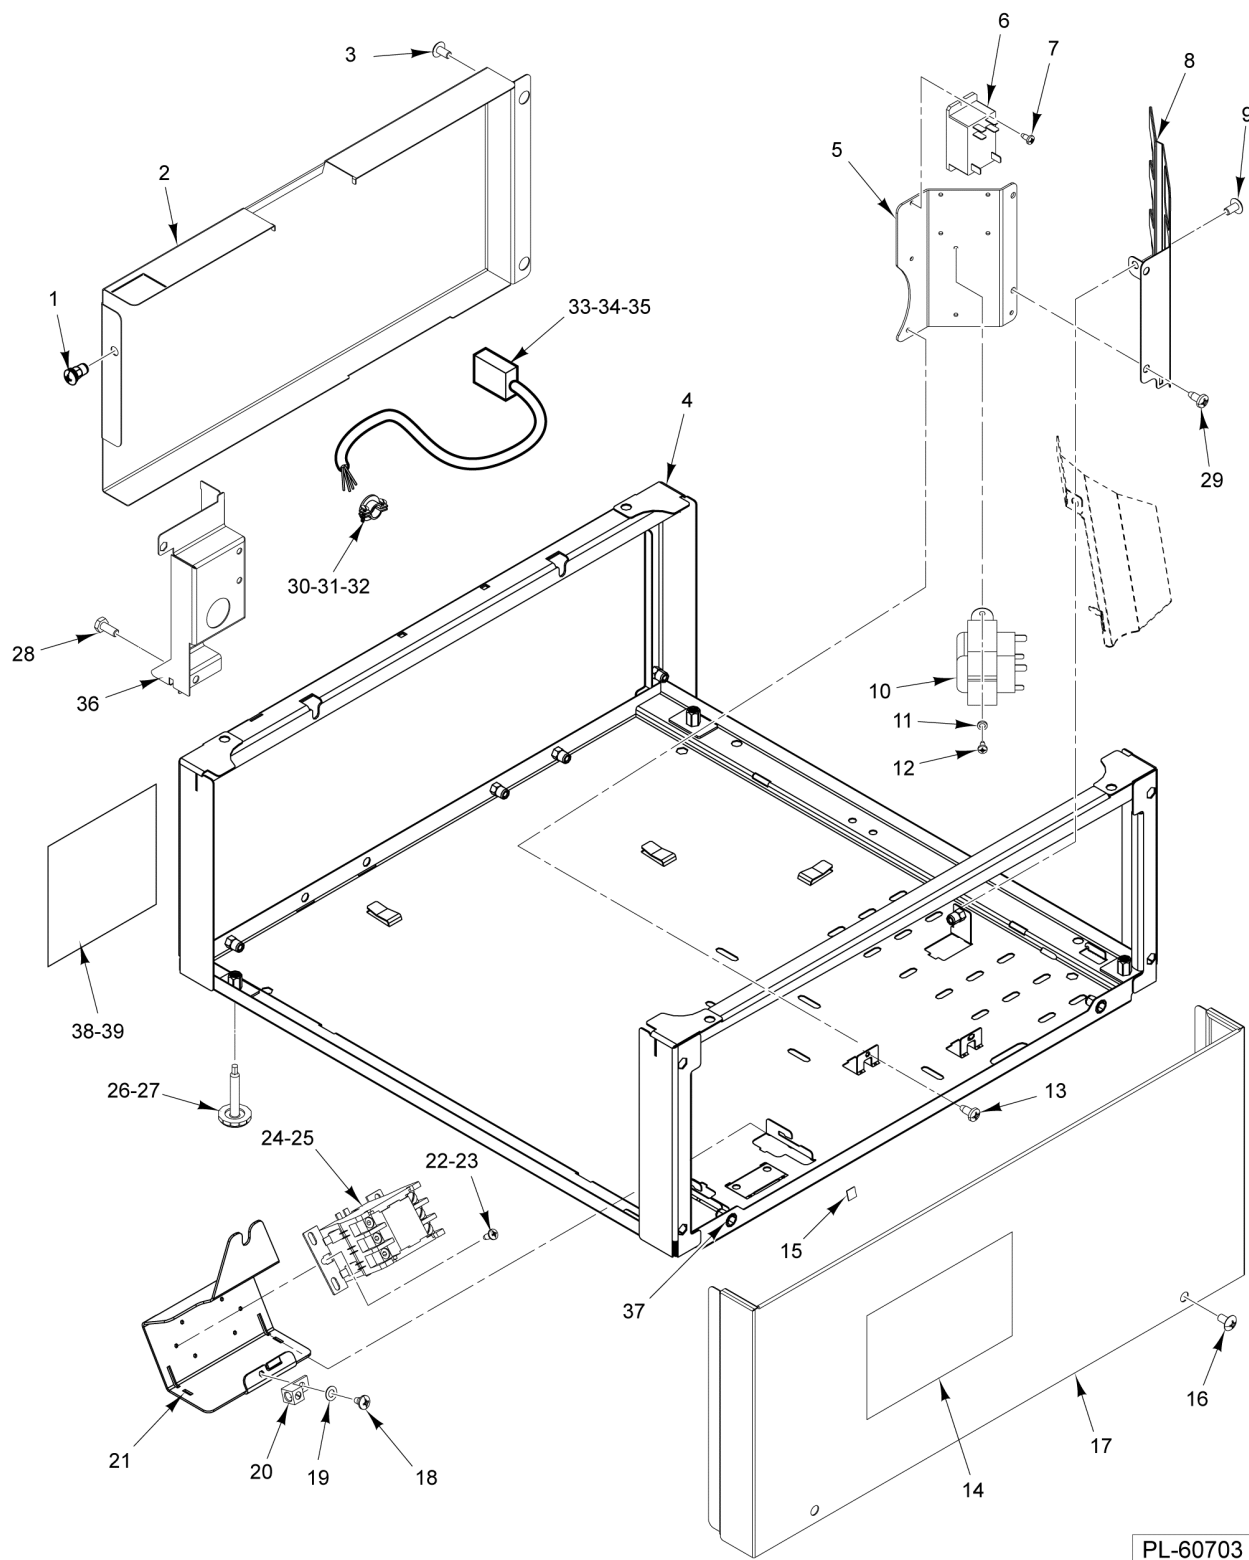 

**BASE ASSEMBLY
(SU-H & SU-L)**

BASE ASSEMBLY (SU-H & SU-L)


ILLUS. PL-60703	PART NO.	NAME OF PART	AMT.
1	0P-678345	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	1
2	0A-108430	Panel - Cover (Rear).....	1
3	0P-678345	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	2
4	0A-108424	Base - Lower (Control Box).....	1
5	0A-108428	Bracket - Contactor.....	1
6	0P-478361	Relay (2-Pole) (120 VAC) (30 Amp.).....	1
7	0P-678160	Self-Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B.....	2
8	0A-108427	Bracket - Chemical Pump (Welco).....	1
9	0P-678345	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	1
10	0P-538484	Transformer (24 V., 30 Amp.).....	1
11	0P-678163	Lockwasher #10 Helical (SST).....	2
12	0P-678160	Self-Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B.....	2
13	0P-678161	Self-Tapping Screw 10-16 x 1/2 Phil. Pan Hd., Type B.....	2
14	0A-678380	Label (Cleaning).....	1
15	0A-698551	Label - Ground.....	1
16	0P-678345	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	2
17	0A-108431	Trim - Front.....	1
18	0P-678348	Self-Tapping Screw 1/4-20 x 3/8 Phil. Pan Hd., Type TT.....	1
19	0P-678351	Lockwasher 1/4 External Shakeproof.....	1
20	0P-528186	Lug - Grounding.....	1
21	0A-108539	Bracket.....	1
22	0P-678161	Self-Tapping Screw 10-16 x 1/2 Phil. Pan Hd., Type B (SU-H).....	2
23	0P-678160	Self-Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B (SU-L).....	2
24	0P-478181	Contactor (25 Amp., 3-Pole) (SU-H).....	1
25	0P-528457	Block - Terminal (3-Pole) (SU-L).....	1
26	0A-108425	Foot - Leveling.....	4
27	0P-678426	Rivnut 5/16-18.....	4
28	0P-678568	Cap Screw 1/4-20 x 1/2 Hex Hd. (SST).....	1
29	0P-678348	Self-Tapping Screw 1/4-20 x 3/8 Phil. Pan Hd., Type TT.....	2
30	0P-678558	Strain Relief - Electrical (1 In.).....	1
31	0P-679559	Strain Relief - Electrical (3/4 In.).....	1
32	0P-678555	Washer - Reducing (1 to 3/4 In.).....	1
33	0A-108512	Kit - Power Cord (120-240 V., 60 Hz., 1 Ph.) (Incls. Item 30).....	1
34	0A-108510	Kit - Power Cord (120-240 V., 60 Hz., 1 Ph.) (Incls. Items 31 & 32).....	1
35	0A-108511	Kit - Power Cord (208-240 V., 60 Hz., 1 Ph.) (Incls. Item 30).....	1
36	0A-108429	Box - Junction.....	1
37	0P-678390	Rivnut 1/4-20.....	AR
38	0A-698553	Electric Diagram (SU-L).....	1
39	0A-698552	Electric Diagram (SU-H).....	1

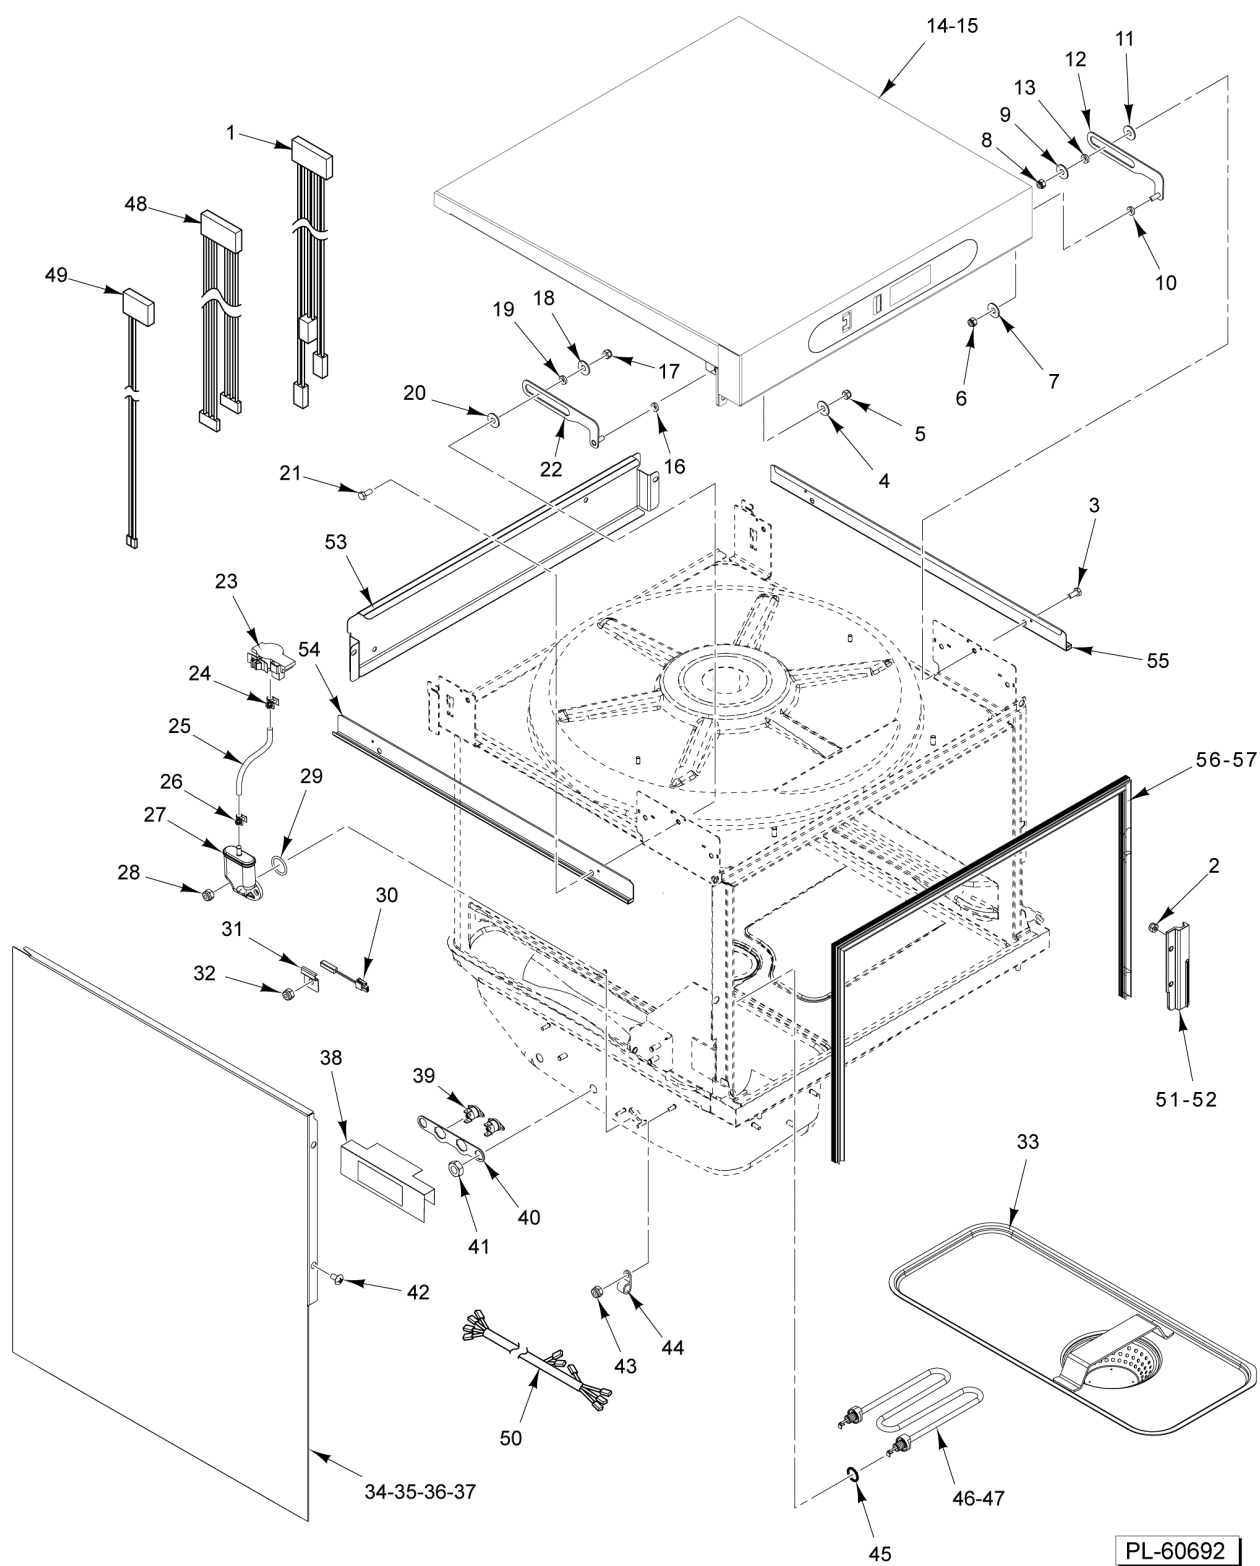 

TANK ASSEMBLY

TANK ASSEMBLY

ILLUS. PL-60692	PART NO.	NAME OF PART	AMT.
1	0P-458471	Harness - Wire (Temperature Probes).....	1
2	0P-678140	Stop Nut 10-24 Hex (SST).....	4
3	0P-678148	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST).....	1
4	0P-678169	Washer (SST).....	1
5	0P-678143	Stop Nut 1/4-20 Hex (SST).....	1
6	0P-678143	Stop Nut 1/4-20 Hex (SST).....	1
7	0P-678169	Washer (SST).....	1
8	0P-678143	Stop Nut 1/4-20 Hex (SST).....	1
9	0P-678169	Washer (SST).....	1
10	0P-678574	Washer.....	1
11	0P-678169	Washer (SST).....	1
12	0A-108439	Link - Control Box Pivot (RH).....	1
13	0P-678574	Washer.....	1
14	0A-108524	Top - Control Box.....	1
15	0P-578505	Gasket - Control Box (Top).....	1
16	0P-678574	Washer.....	1
17	0P-678143	Stop Nut 1/4-20 Hex (SST).....	1
18	0P-678169	Washer (SST).....	1
19	0P-678574	Washer.....	1
20	0P-678169	Washer (SST).....	1
21	0P-678148	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST).....	1
22	0A-108440	Link - Control Box Pivot (LH).....	1
23	0P-658387	Sensor - Pressure.....	2
24	0P-688362	Clamp - Spring Action Hose.....	1
25	0P-688537	Kit - Tubing (Incls. Items 24 & 26) (Cut to 28 In.).....	1
26	0P-688362	Clamp - Spring Action Hose.....	1
27	0A-108501	Trap - Air.....	1
28	0P-678143	Stop Nut 1/4-20 Hex (SST).....	2
29	0P-578564	O-Ring.....	1
30	0P-658423	Thermistor.....	1
31	0A-108451	Back - Thermistor.....	1
32	0P-678143	Stop Nut 1/4-20 Hex (SST).....	1
33	0P-628422	Strainer.....	1
34	0B-108447	Panel - Side (RH) (SU-H & SU-L).....	1
35	0B-108449	Panel - Side (RH) (SG).....	1
36	0B-108448	Panel - Side (LH) (SU-H & SU-L).....	1
37	0A-108450	Panel - Side (LH) (SG).....	1
38	0A-108381	Barrier - Sump Heater (Mylar).....	1
39	0P-658504	Protector - High Limit.....	2
40	0A-108386	Bracket - Overtemp Mounting.....	1
41	0P-678563	Lock Nut 1/2-13 Hex.....	2
42	0P-678345	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	12
43	0P-678336	Lock Nut 3/16 Washer Type (SST).....	4
44	0A-108045	Clamp - Wire (3/4 I.D.).....	12
45	0P-578360	O-Ring.....	2
46	0P-558395	Element - Heater (Sump) (120 V.).....	1
47	0P-558384	Element - Heater (Sump) (208-240 V.).....	1
48	0P-458472	Harness - Wire (Pressure Sensor).....	1
49	0P-458480	Harness - Wire (High Limit) (SU-L & SG).....	1
50	0P-458479	Harness - Wire (Sump Heater).....	1
51	0P-578497	Guide - Door (RH).....	1
52	0P-578498	Guide - Door (LH).....	1
53	0P-428526	Panel - Rear Trim (Upper) (SG).....	1
54	0A-108528	Gutter - Left.....	1
55	0A-108527	Gutter - Right.....	1
56	0P-578545	Seal - Door (SU-H & SU-L).....	1
57	0P-578550	Seal - Door (SG).....	1

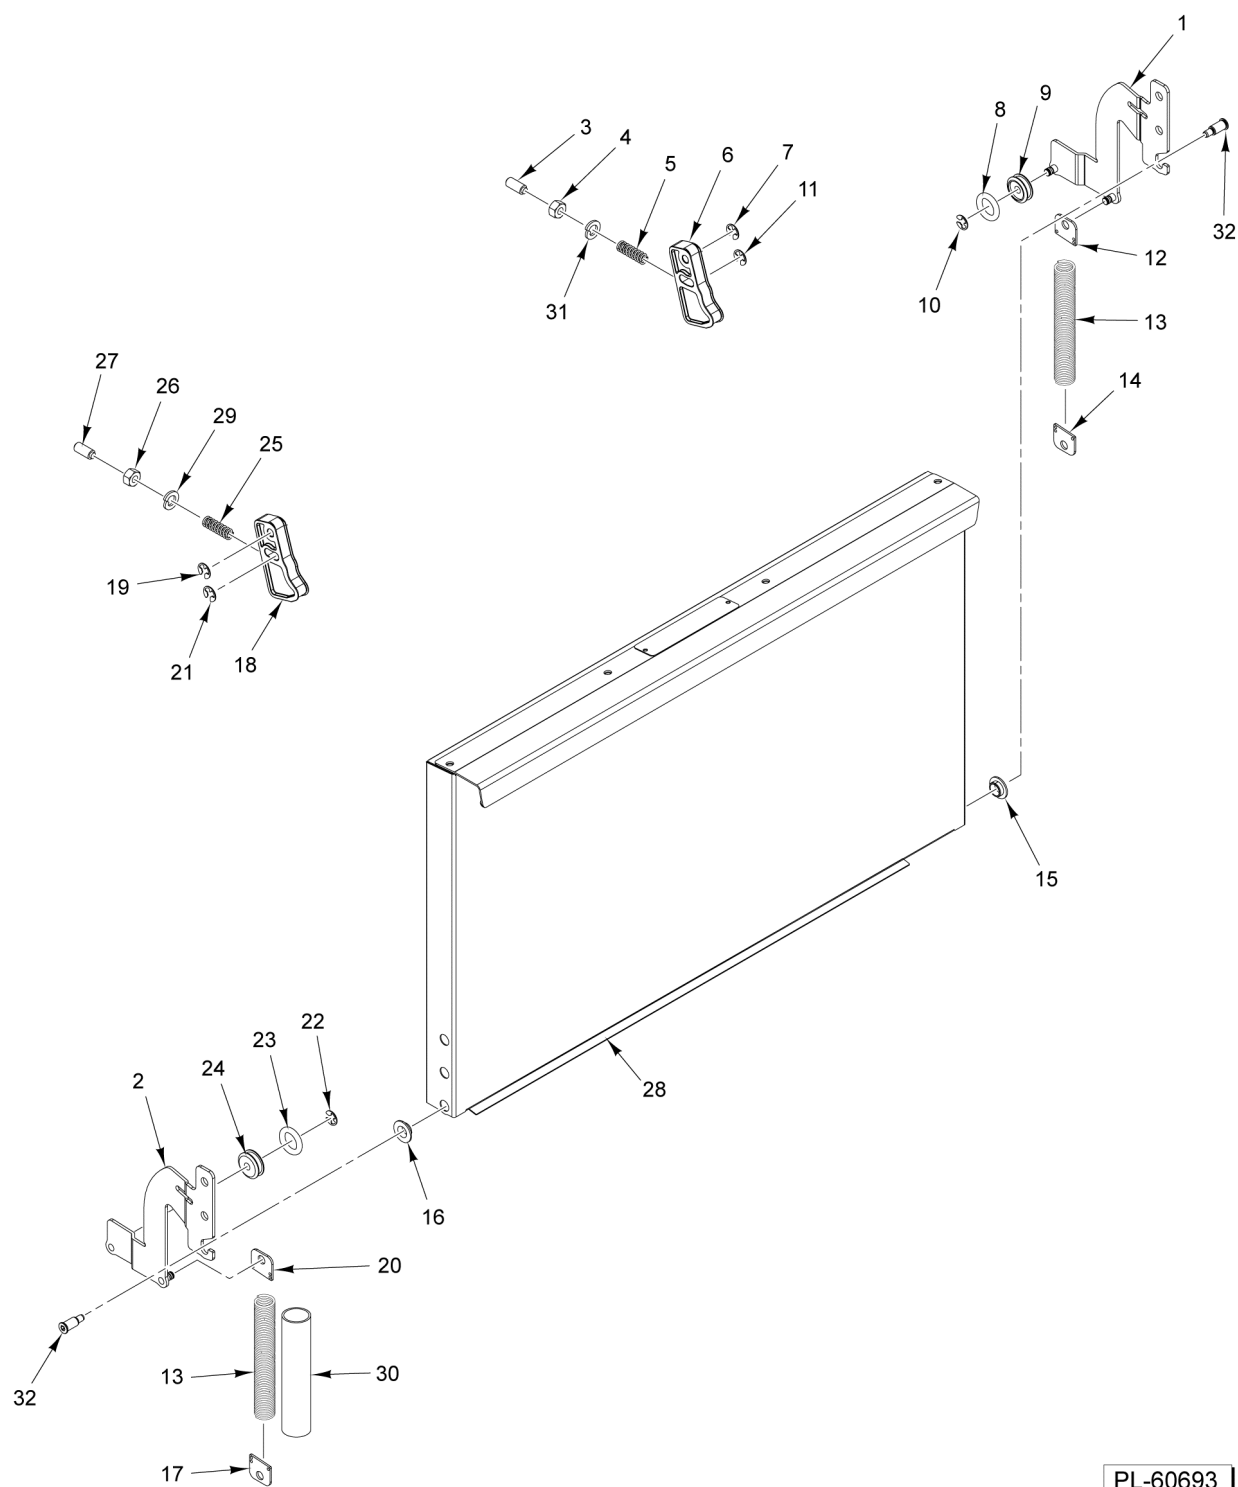 


PL-60693

DOOR ASSEMBLY (SG)

DOOR ASSEMBLY (SG)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60693			
1	0A-108519	Stop - Door (RH).....	1
2	0A-108520	Stop - Door (LH).....	1
3	0P-678570	Set Screw 5/16-18 x 3/4 Hex Hds., Dog Pt. (SST).....	1
4	0P-678139	Nut 5/16-18 Hex (SST).....	1
5	0A-608462	Spring -Compression.....	1
6	0A-108463	Cam - Door Pivot.....	1
7	0P-678567	Retaining Ring 1/4 In. (SST).....	1
8	0P-578565	O-Ring.....	1
9	0A-108465	Roller - Cam.....	1
10	0P-678567	Retaining Ring 1/4 In. (SST).....	1
11	0P-678567	Retaining Ring 1/4 In. (SST).....	1
12	0A-108464	Connector - Spring.....	1
13	0P-608538	Spring - Extension.....	2
14	0A-108464	Connector - Spring.....	1
15	0A-668460	Bearing - Door.....	1
16	0A-668460	Bearing - Door.....	1
17	0A-108464	Connector - Spring.....	1
18	0A-108463	Cam - Door Pivot.....	1
19	0P-678567	Retaining Ring 1/4 In. (SST).....	1
20	0A-108464	Connector - Spring.....	1
21	0P-678567	Retaining Ring 1/4 In. (SST).....	1
22	0P-678567	Retaining Ring 1/4 In. (SST).....	1
23	0P-578565	O-Ring.....	1
24	0A-108465	Roller - Cam.....	1
25	0A-608462	Spring -Compression.....	1
26	0P-678139	Nut 5/16-18 Hex (SST).....	1
27	0P-678570	Set Screw 5/16-18 x 3/4 Hex Hds., Dog Pt. (SST).....	1
28	0B-108521	Door Assy.....	1
29	0P-678165	Lockwasher 5/16 Helical (SST).....	1
30	0P-678508	Cover - Spring.....	1
31	0P-678165	Lockwasher 5/16 Helical (SST).....	1
32	0P-678518	Scew - Pivot.....	6

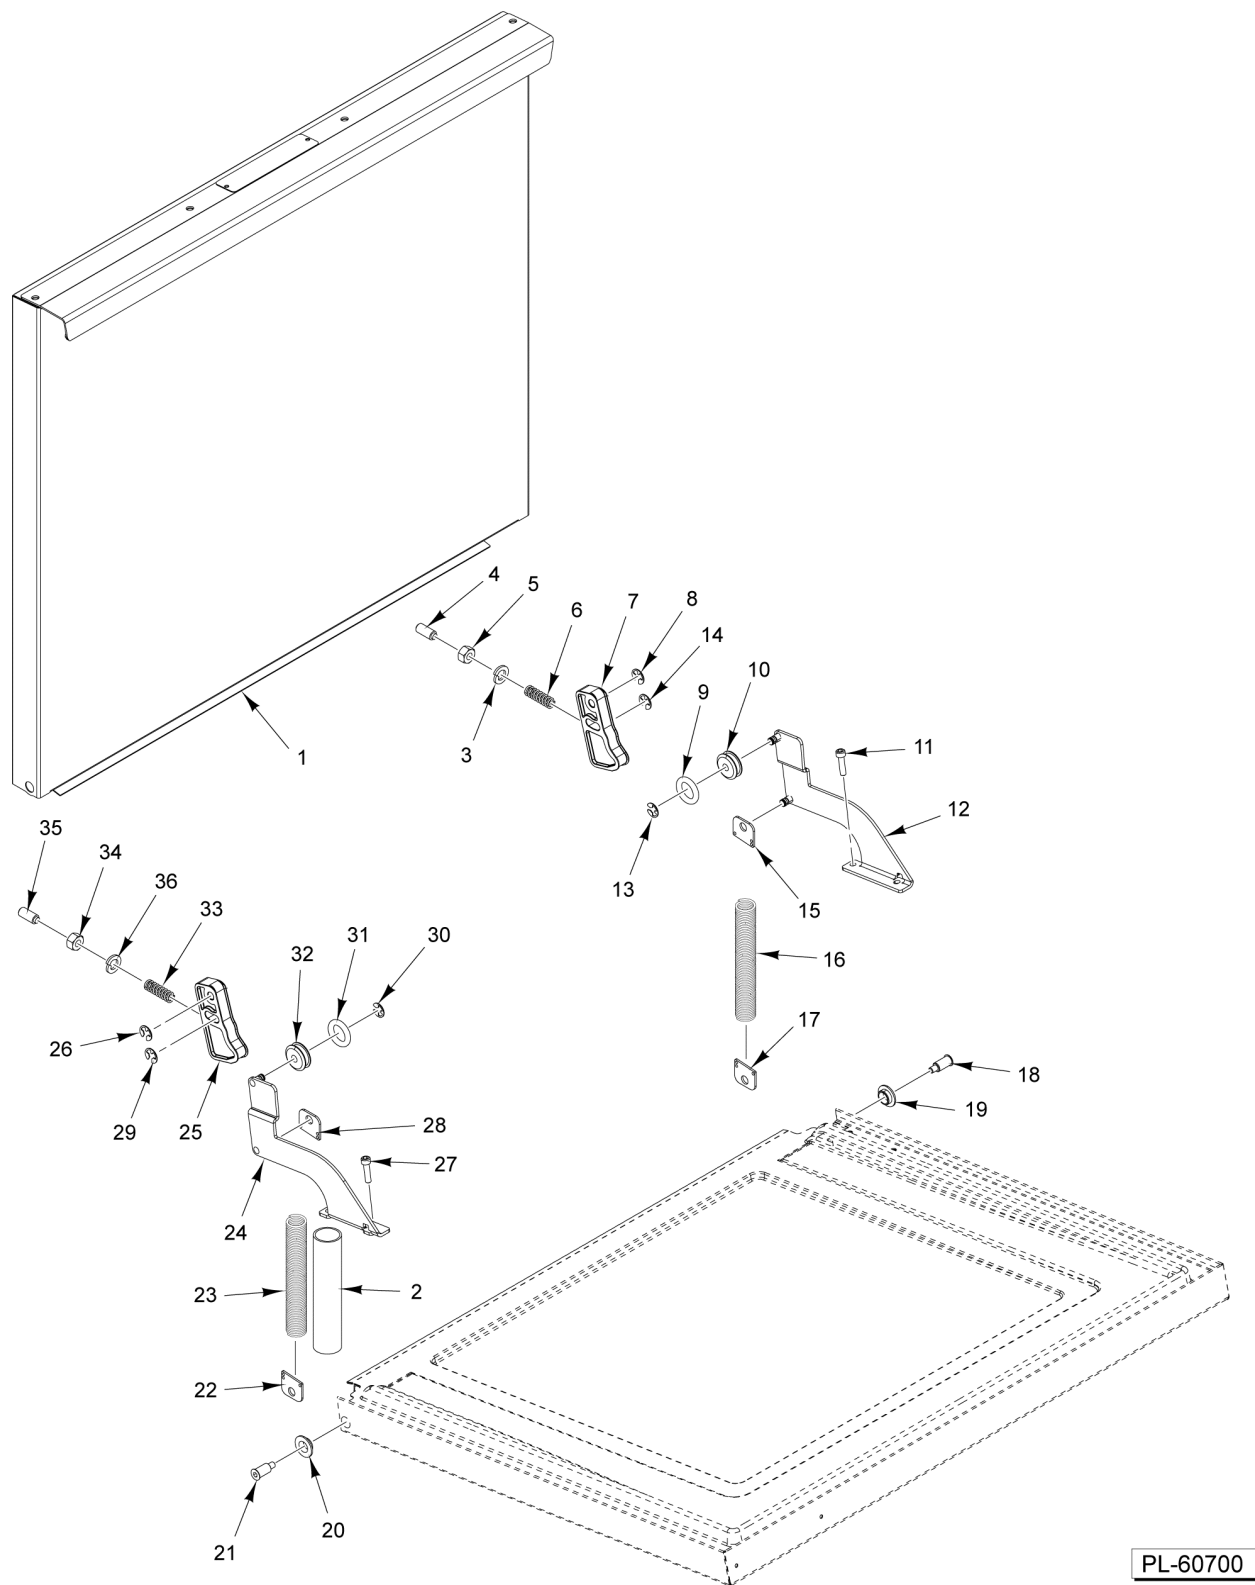 


PL-60700

DOOR ASSEMBLY (SU-H & SU-L)

DOOR ASSEMBLY (SU-H & SU-L)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60700			
1	0A-108530	Door Assy.....	1
2	0P-678508	Cover - Spring.....	1
3	0P-678165	Lockwasher 5/16 Helical (SST).....	1
4	0P-678570	Set Screw 5/16-18 x 3/4 Hex Hdls., Dog Pt. (SST).....	1
5	0P-678139	Nut 5/16-18 Hex (SST).....	1
6	0A-608462	Spring -Compression.....	1
7	0A-108463	Cam - Door Pivot.....	1
8	0P-678567	Retaining Ring 1/4 In. (SST).....	1
9	0P-578565	O-Ring.....	1
10	0A-108465	Roller - Cam.....	1
11	0P-678571	Cap Screw 10-32 x 7/16 Hex Socket Hd. (SST).....	2
12	0A-108499	Stop - Door (RH).....	1
13	0P-678567	Retaining Ring 1/4 In. (SST).....	1
14	0P-678567	Retaining Ring 1/4 In. (SST).....	1
15	0A-108464	Connector - Spring.....	1
16	0A-608461	Spring - Extension.....	1
17	0A-108464	Connector - Spring.....	1
18	0P-678466	Shoulder Bolt.....	1
19	0A-668460	Bearing - Door.....	1
20	0A-668460	Bearing - Door.....	1
21	0P-678466	Shoulder Bolt.....	1
22	0A-108464	Connector - Spring.....	1
23	0A-608461	Spring - Extension.....	1
24	0A-108500	Stop - Door (LH).....	1
25	0A-108463	Cam - Door Pivot.....	1
26	0P-678567	Retaining Ring 1/4 In. (SST).....	1
27	0P-678571	Cap Screw 10-32 x 7/16 Hex Socket Hd. (SST).....	2
28	0A-108464	Connector - Spring.....	1
29	0P-678567	Retaining Ring 1/4 In. (SST).....	1
30	0P-678567	Retaining Ring 1/4 In. (SST).....	1
31	0P-578565	O-Ring.....	1
32	0A-108465	Roller - Cam.....	1
33	0A-608462	Spring -Compression.....	1
34	0P-678139	Nut 5/16-18 Hex (SST).....	1
35	0P-678570	Set Screw 5/16-18 x 3/4 Hex Hdls., Dog Pt. (SST).....	1
36	0P-678165	Lockwasher 5/16 Helical (SST).....	1

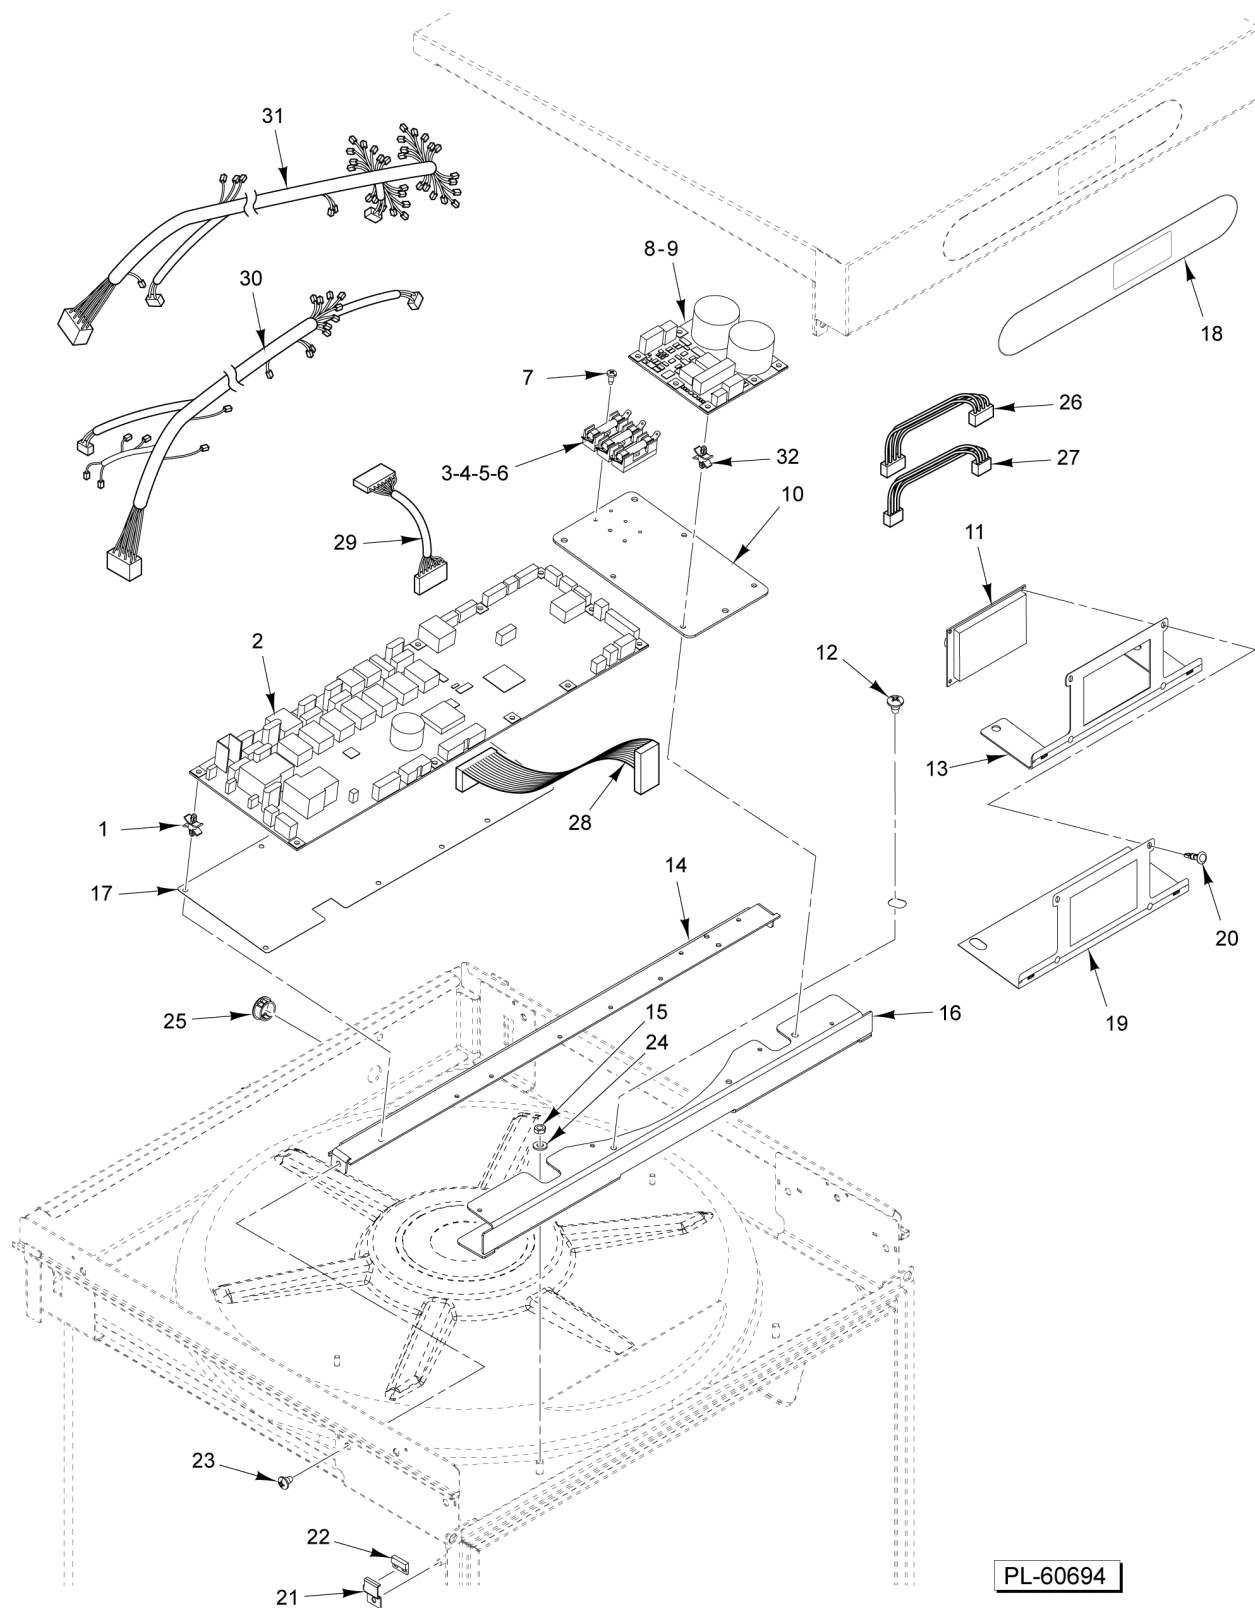 


PL-60694

CONTROL PANEL AND BOARDS

CONTROL PANEL AND BOARDS


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60694			
1	0P-428051	Standoff.....	7
2	0P-428543	Board - Master.....	1
3	0P-528502	Block - Fuse.....	1
4	0P-528556	Fuse (0.5 Amp.) (250 V.).....	1
5	0P-528561	Fuse (2.5 Amp.) (250 V.).....	1
6	0P-528557	Fuse (1.5 Amp.) (250 V.) (Hot Only).....	1
7	0P-678159	Self-Tapping Screw 6-20 x 3/8 Phil. Bndg. Hd., Type B.....	2
8	0P-428483	Board - Power Supply.....	1
9	0P-528313	Fuse (250 V.) (1 Amp.).....	1
10	0A-108442	Mount - Power Supply.....	1
11	0P-428398	Display.....	1
12	0P-678348	Self-Tapping Screw 1/4-20 x 3/8 Phil. Pan Hd., Type TT.....	2
13	0P-428525	Mount - Display.....	1
14	0A-108444	Base - Control Box (Upper).....	1
15	0P-678143	Stop Nut 1/4-20 Hex (SST).....	2
16	0A-108443	Mount - Brace (Front).....	1
17	0P-428509	Mylar - Barrier.....	1
18	0P-428529	Keypad - Membrane.....	1
19	0P-428503	Mylar - Display.....	1
20	0A-108445	Clip - Board.....	4
21	0A-108481	Bracket - Reed Switch.....	1
22	0B-108397	Switch Assy. - Door.....	1
23	0P-678348	Self-Tapping Screw 1/4-20 x 3/8 Phil. Pan Hd., Type TT.....	2
24	0P-678169	Washer (SST).....	2
25	0P-678554	Bushing - Snap.....	1
26	0P-458475	Harness - Control (12 V.) (Control Signal from Control Board to Power Supply Board)	1
27	0P-458474	Harness - Power Supply (Power Supply Board to Control Board).....	1
28	0P-458473	Cable - Display.....	1
29	0P-458477	Harness - Keypad.....	1
30	0P-458476	Harness - Wire (120 V.) (SU-H).....	1
31	0P-428506	Harness - Wire (120 V.) (SU-L & SG).....	1
32	0P-428051	Standoff.....	4

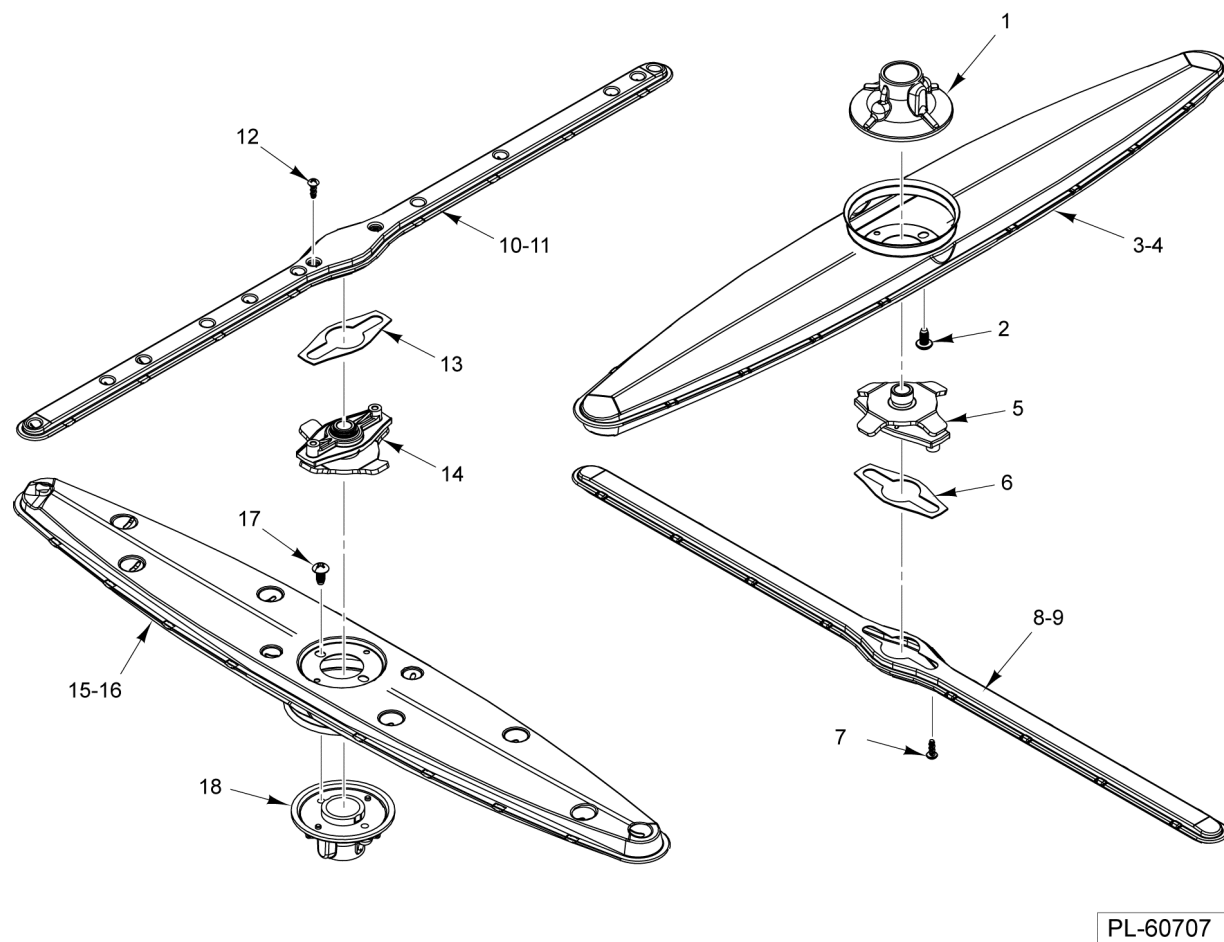 

WASH ARM AND RINSE ARM ASSEMBLY

WASH ARM AND RINSE ARM ASSEMBLY

ILLUS. PL-60707	PART NO.	NAME OF PART	AMT.
1	0A-108459	Hub - Wash Arm.....	1
2	0P-678573	Self-Tapping Screw 10-16 x 3/8 Phil. Pan Hd., Type B.....	2
3	0A-108400	Arm - Wash.....	1
4	0A-108401	Wash Arm Assy. (Incls. Items 1, 2, & 3).....	1
5	0B-108468	Base - Rinse Arm.....	1
6	0P-578467	Gasekt - Rinse Arm.....	1
7	0P-678572	Self-Tapping Screw.....	2
8	0A-108458	Arm - Rinse.....	1
9	0B-108408	Rinse Arm Assy. (Incls. Items 5 thru 8).....	1
10	0B-108408	Rinse Arm Assy. (Incls. Items 11 thru 15).....	1
11	0A-108458	Arm - Rinse.....	1
12	0P-678572	Self-Tapping Screw.....	2
13	0P-578467	Gasekt - Rinse Arm.....	1
14	0B-108468	Base - Rinse Arm.....	1
15	0A-108401	Wash Arm Assy. (Incls. Items 16, 17, & 18).....	1
16	0A-108400	Arm - Wash.....	1
17	0P-678573	Self-Tapping Screw 10-16 x 3/8 Phil. Pan Hd., Type B.....	2
18	0A-108459	Hub - Wash Arm.....	1

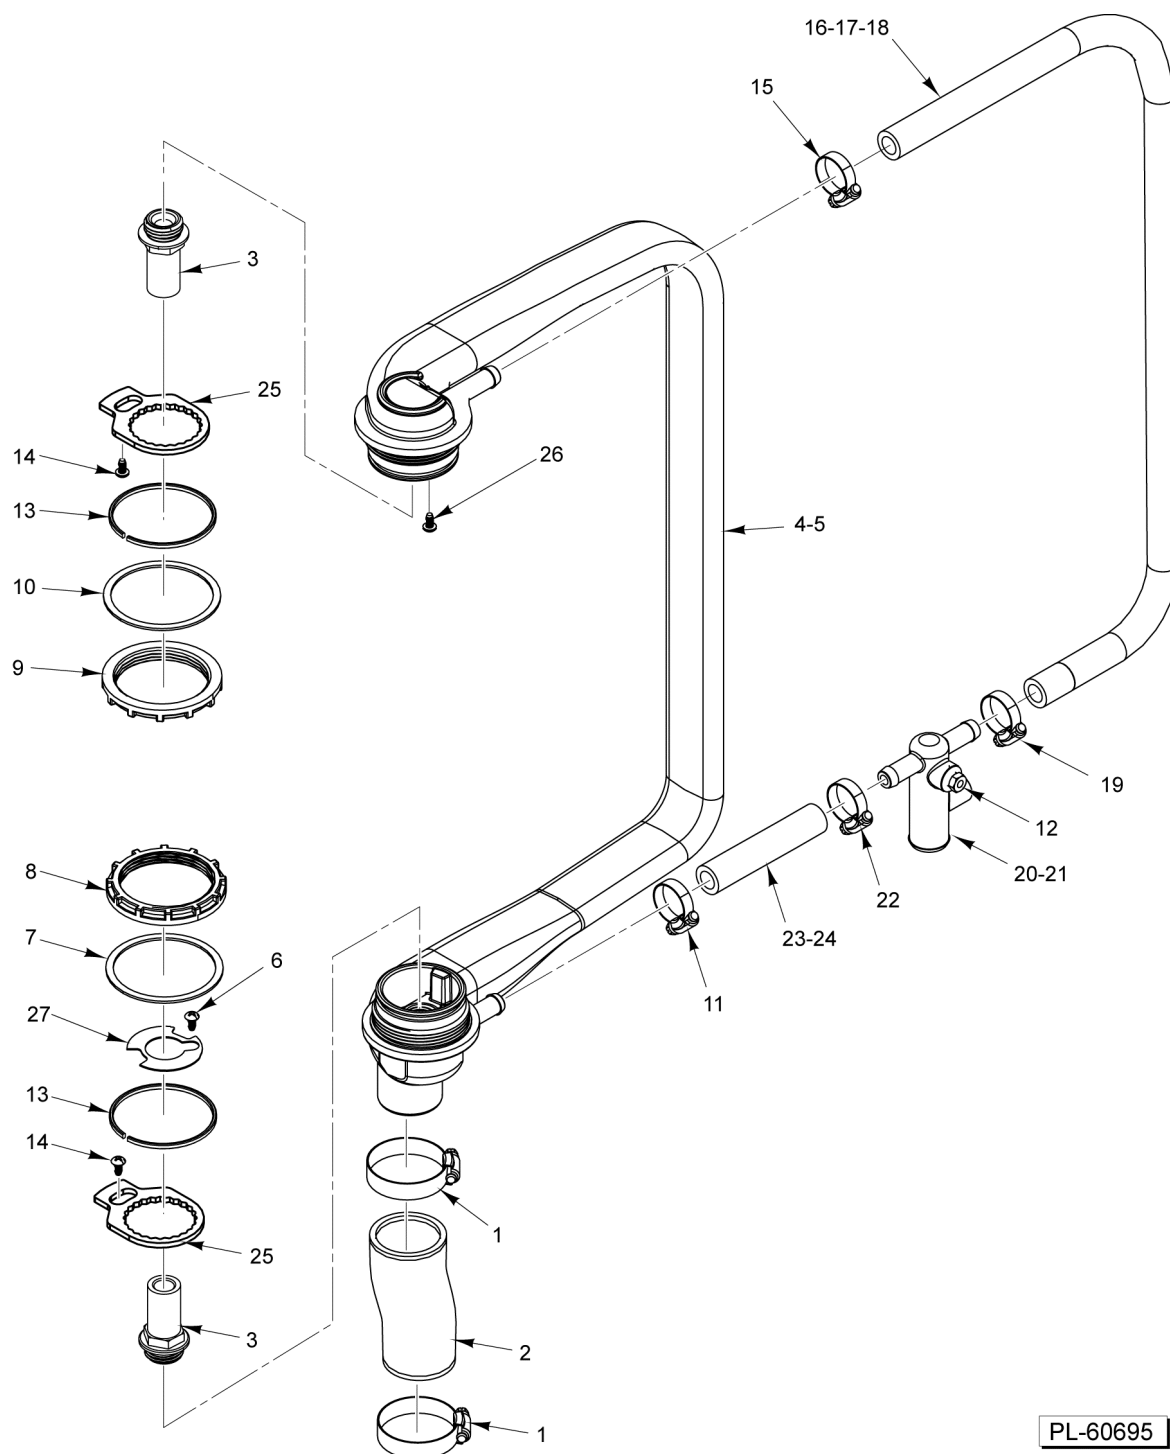 


PL-60695

WASH PIPE ASSEMBLY

WASH PIPE ASSEMBLY


ILLUS. PL-60695	PART NO.	NAME OF PART	AMT.
1	0A-108082	Clamp - Hose.....	2
2	0P-688421	Hose - Outlet Pump.....	1
3	0A-108399	Shaft - Rinse.....	2
4	0A-108405	Wash Tube (SG).....	1
5	0A-108405	Wash Tube (SU-H & SU-L).....	1
6	0P-678573	Self-Tapping Screw 10-16 x 3/8 Phil. Pan Hd., Type B.....	1
7	0P-578566	O-Ring.....	1
8	0P-678409	Nut - Wash.....	1
9	0P-678409	Nut - Wash.....	1
10	0P-578566	O-Ring.....	1
11	0A-108383	Clamp - Hose.....	1
12	0P-658206	Probe Assy. - Rinse.....	1
13	0P-578513	Ring - Sealing.....	2
14	0P-678573	Self-Tapping Screw 10-16 x 3/8 Phil. Pan Hd., Type B.....	2
15	0A-108383	Clamp - Hose.....	1
16	0P-688378	Hose - Rinse (Upper) (SU-H).....	1
17	0P-688393	Hose - Rinse (Upper) (Cold) (SG).....	1
18	0P-688392	Hose - Rinse (Upper) (SU-L).....	1
19	0A-108383	Clamp - Hose.....	1
20	0P-688453	Manifold - Rinse (Hot) (SU-H).....	1
21	0P-688454	Manifold - Rinse (Cold) (SU-L & SG).....	1
22	0A-108383	Clamp - Hose.....	1
23	0P-688377	Hose - Rinse (Lower) (Hot) (SU-H).....	1
24	0P-688391	Hose - Rinse (Lower) (Cold) (SU-L & SG).....	1
25	0P-678507	Retainer - Rinse Shaft.....	2
26	0P-678573	Self-Tapping Screw 10-16 x 3/8 Phil. Pan Hd., Type B.....	1
27	0A-108407	Choke - Wash.....	1

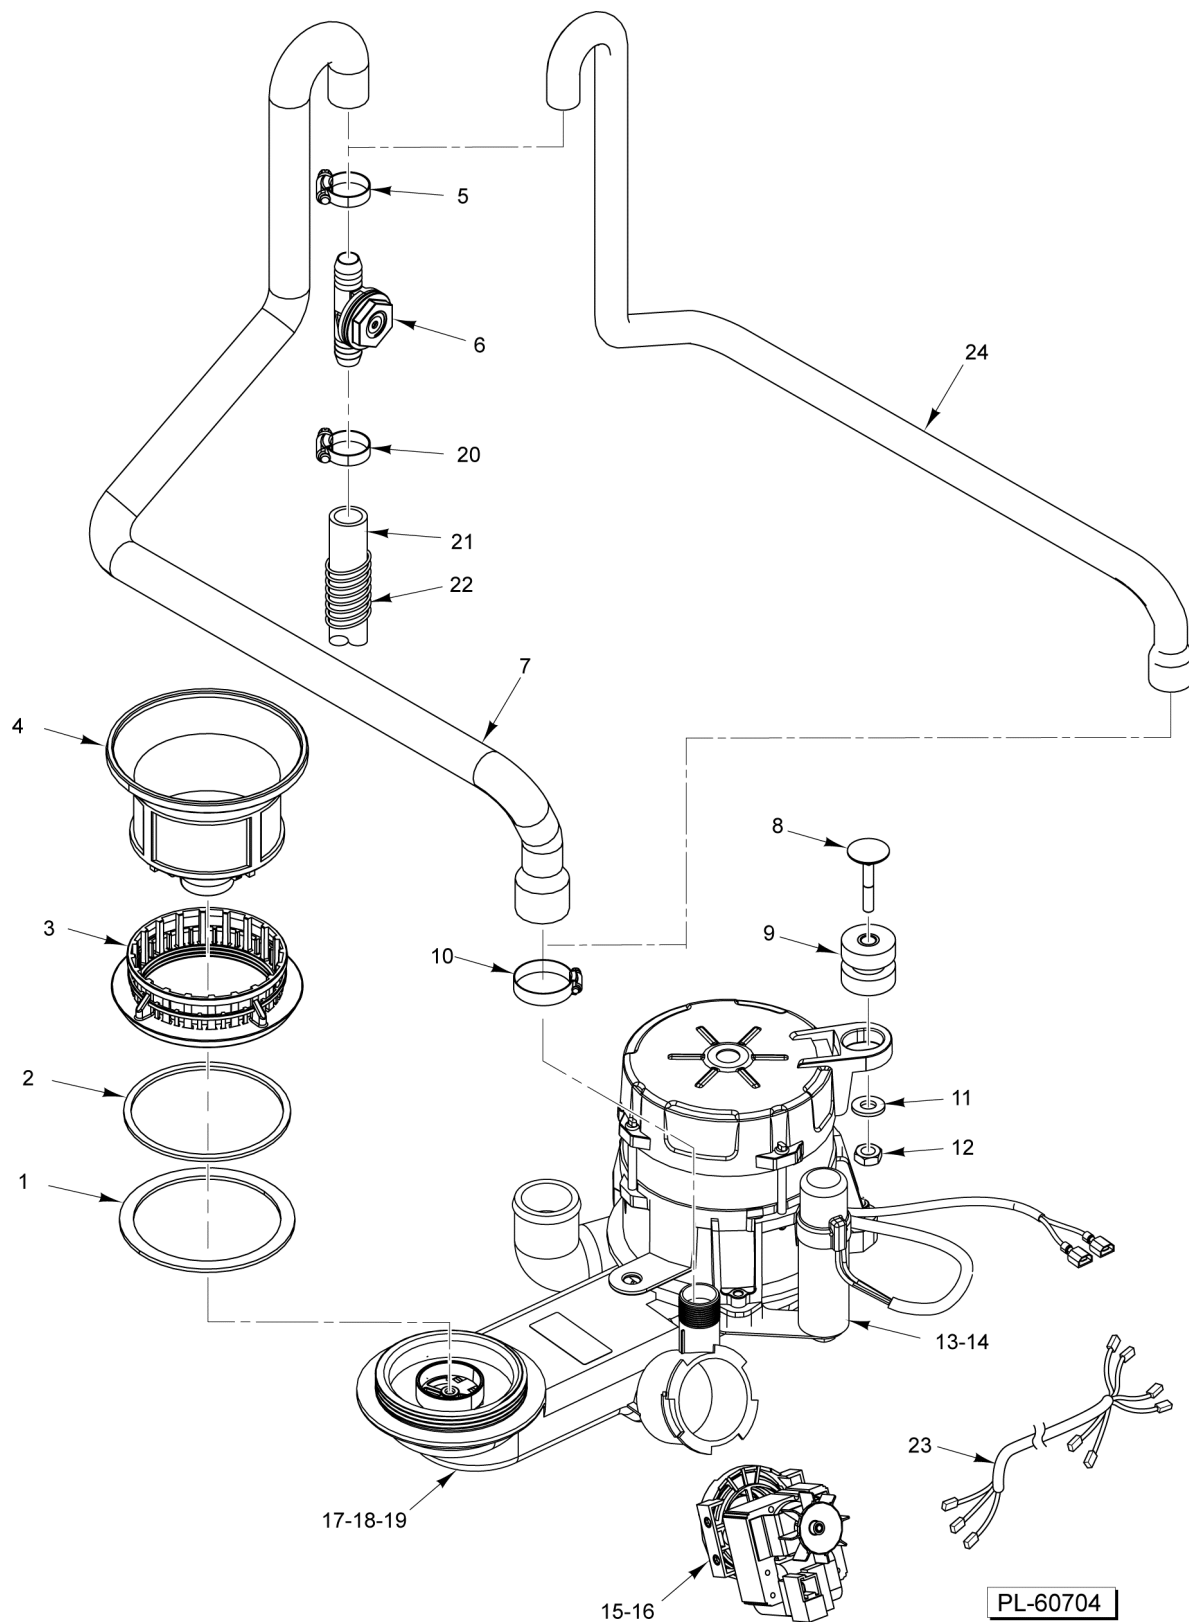 

WASH PUMP AND DRAIN

WASH PUMP AND DRAIN

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60704			
1	0A-108547	Ring.....	1
2	0P-578485	Gasket - Wash Pump.....	1
3	0A-108549	Nut.....	1
4	0A-108544	Strainer - Sieve (Fine).....	1
5	0A-108383	Clamp - Hose.....	1
6	0P-688389	Tee - Check Valve.....	1
7	0P-688437	Hose - Drain (SU-H & SU-L).....	1
8	0A-108455	Bolt - Damper Carriage.....	1
9	0A-108546	Damper - Vibration.....	1
10	0A-108384	Clamp - Hose.....	1
11	0P-678170	Washer (SST).....	1
12	NS-047-82	Stop Nut 1/4-20 Hex (SST).....	1
13	0P-418494	Capacitor (120 V., 60 Hz., 1 Ph.).....	1
14	0P-418493	Capacitor (208-240 V., 50/60 Hz., 1 Ph.).....	1
15	0P-418491	Pump - Drain (60 Hz.).....	1
16	0P-418492	Pump - Drain (50 Hz.).....	1
17	0P-418486	Pump Assy. (Wash) (120 V., 60 Hz., 1 Ph.) (Incls. Items 1, 2, 3, 13, & 15).....	1
18	0P-418487	Pump Assy. (Wash) (208-240 V., 60 Hz., 1 Ph.) (Incls. Items 1, 2, 3, 14, & 15).....	1
19	0P-418488	Pump Assy. (Wash) (208-240 V., 50 Hz., 1 Ph.).....	1
20	0A-108383	Clamp - Hose.....	1
21	0P-688375	Hose - Drain (84 In.).....	1
22	0P-608382	Spring - Drain Hose.....	1
23	0P-458478	Harness - Wire (Pump).....	1
24	0P-688522	Hose - Drain (SG).....	1

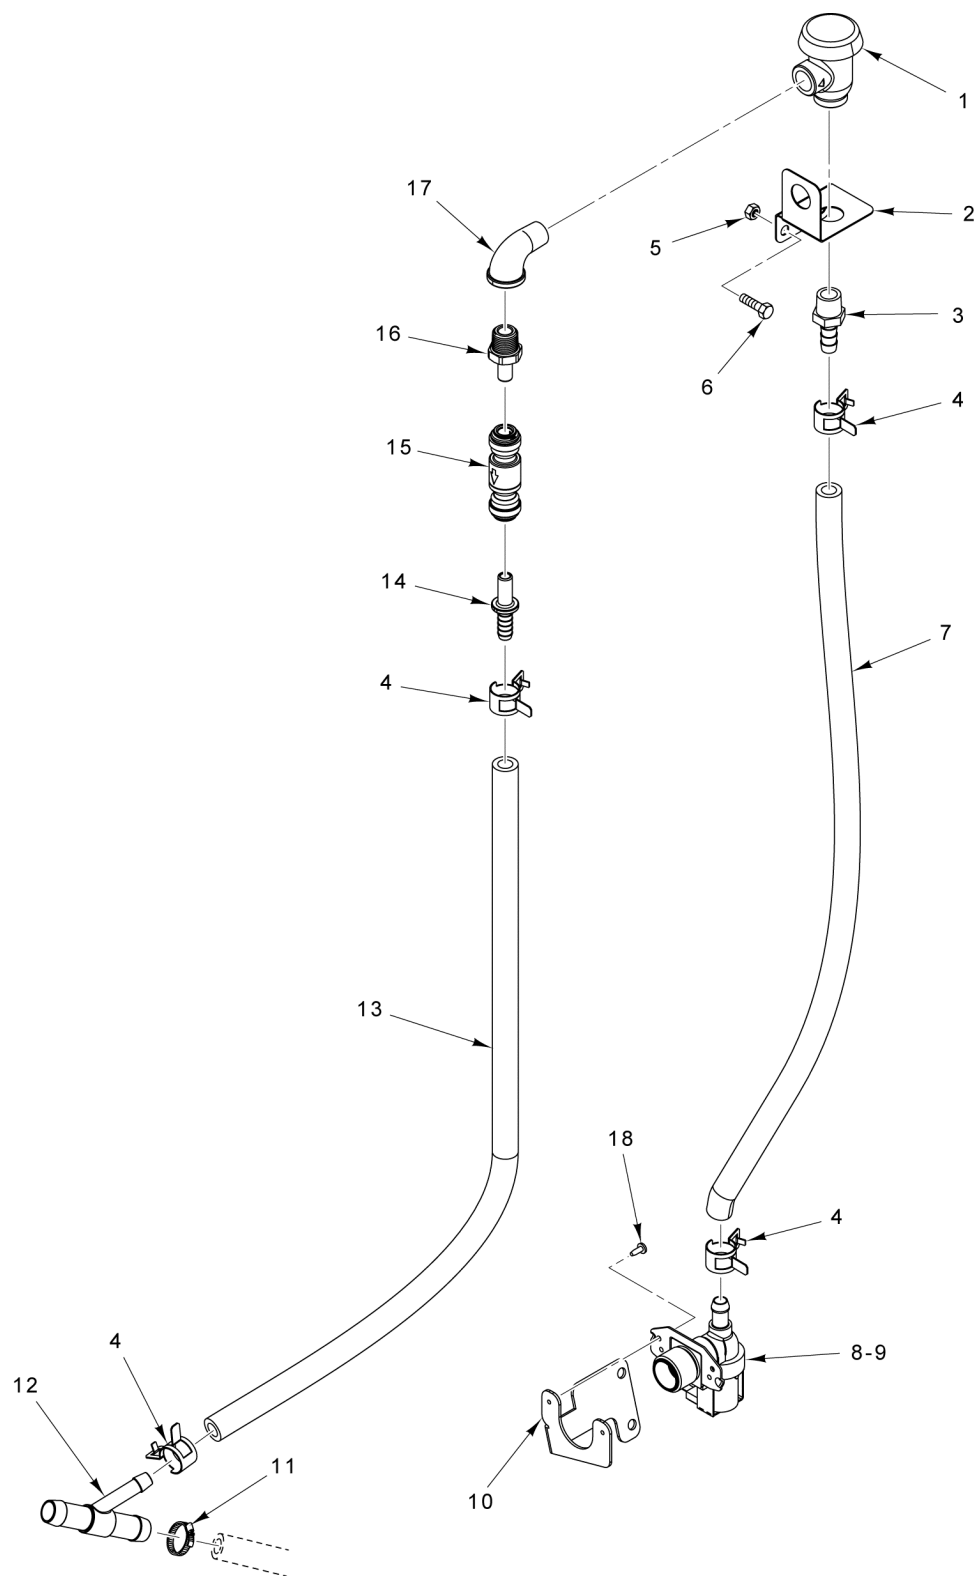 


PL-60897

DRAIN WATER TEMPERING

DRAIN WATER TEMPERING

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60897			
1	0P-628587	Vacuum Breaker (3/8 In.).....	1
2	0A-108594	Mount - Breaker.....	1
3	0P-688589	Fitting - Hose 3/8 to 3/8 NPT (Brass).....	1
4	0A-108385	Clamp.....	4
5	0P-678595	Stop Nut 1/4-20 Hex (SST).....	4
6	0P-678596	Cap Screw 1/4-20 x 1/2 Hex Hd. (SST).....	4
7	0P-688593	Hose 3/8 x 22.....	1
8	0P-628456	Valve (Deltrol).....	1
9	0P-458599	Harness - Wiring.....	1
10	0A-108586	Bracket - Pump.....	1
11	0A-108383	Clamp - Hose.....	2
12	0P-688585	Adapter - Tee.....	1
13	0P-688592	Hose 3/8 x 26-1/2.....	1
14	0P-688591	Fitting 3/8 Stem x 3/8 Barb.....	1
15	0P-628597	Valve - Check (3/8 In.) (Quick Connect).....	1
16	0P-688590	Fitting 3/8 NPT x 3/8 Stem.....	1
17	0P-688588	Elbow - Street 3/8 x 90 Deg.....	1
18	0P-678598	Self-Tapping Screw 6-20 x 3/8 Phil. Bndg. Hd., Type B.....	2

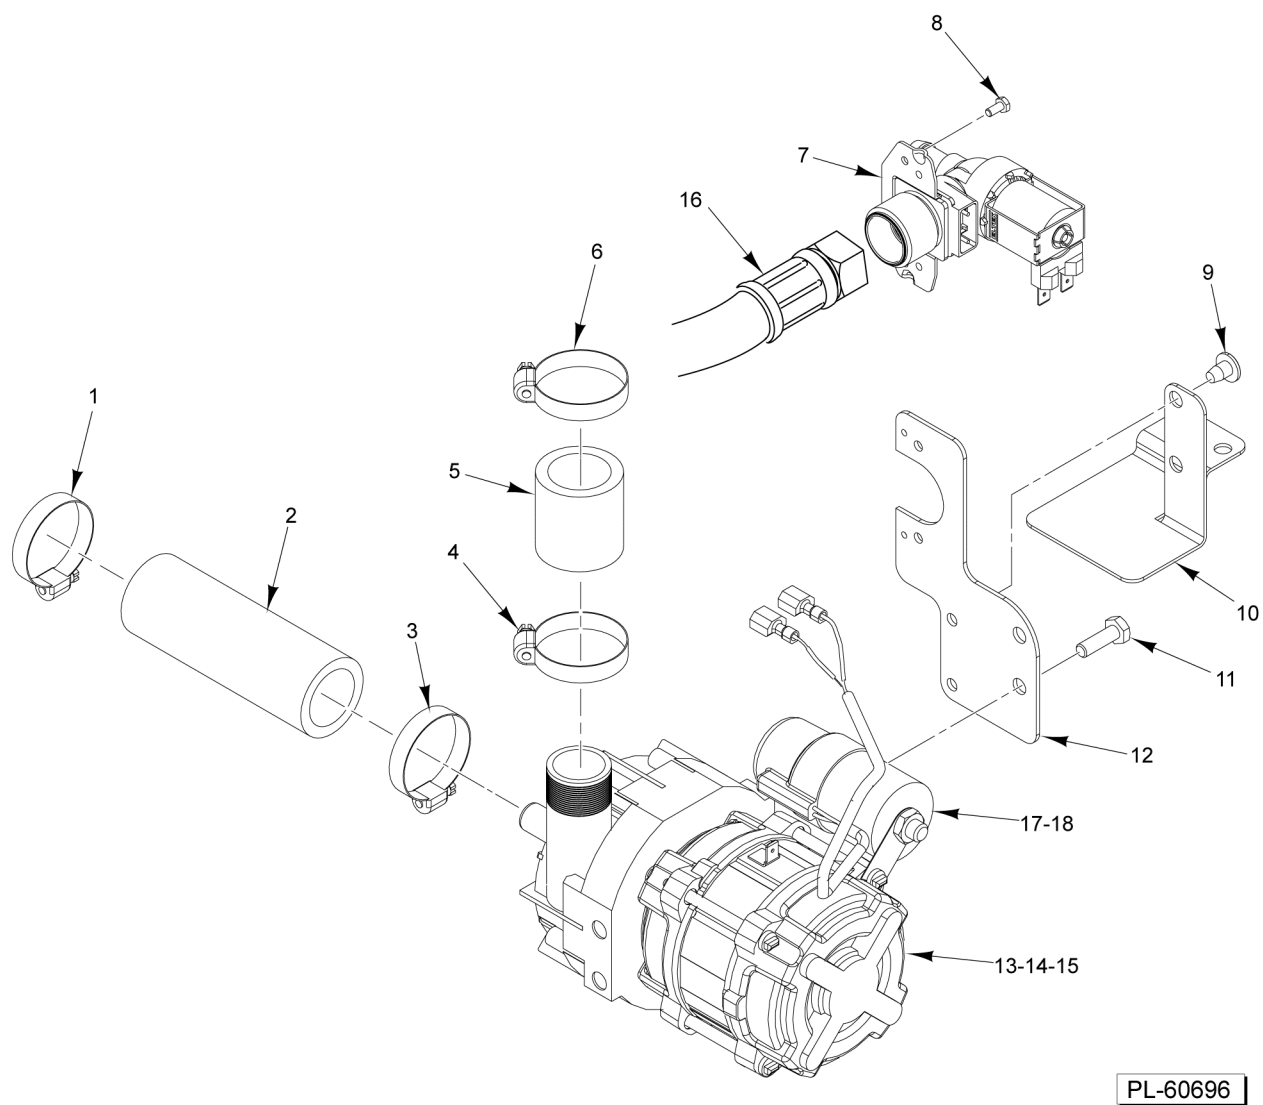 


PL-60696

RINSE PUMP

RINSE PUMP


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60696			
1	0A-108384	Clamp - Hose.....	1
2	0P-688420	Hose - Inlet (4 In.).....	1
3	0A-108384	Clamp - Hose.....	1
4	0A-108384	Clamp - Hose.....	1
5	0P-688419	Hose - Outlet (1-3/4 In.).....	1
6	0A-108384	Clamp - Hose.....	1
7	0P-628456	Valve (Deltrol).....	1
8	0P-678159	Self-Tapping Screw 6-20 x 3/8 Phil. Bndg. Hd., Type B.....	2
9	0P-678348	Self-Tapping Screw 1/4-20 x 3/8 Phil. Pan Hd., Type TT.....	2
10	0A-108434	Bracket - Pump (Rinse).....	1
11	0P-678569	Cap Screw M6 x 1.0 x 18mm Hex Hd. (SST).....	2
12	0A-108452	Mount - Fill Valve.....	1
13	0P-418489	Pump - Rinse (120 V.).....	1
14	0P-418490	Pump - Rinse (208-240 V., 60 Hz.).....	1
15	0P-428532	Cover - Mylar (Rinse Pump).....	1
16	0P-688376	Hose - Fill (74 In.).....	1
17	0P-418496	Capacitor (120 V.) (Incls. Hardware).....	1
18	0P-418495	Capacitor (208-240 V.) (Incls. Hardware).....	1

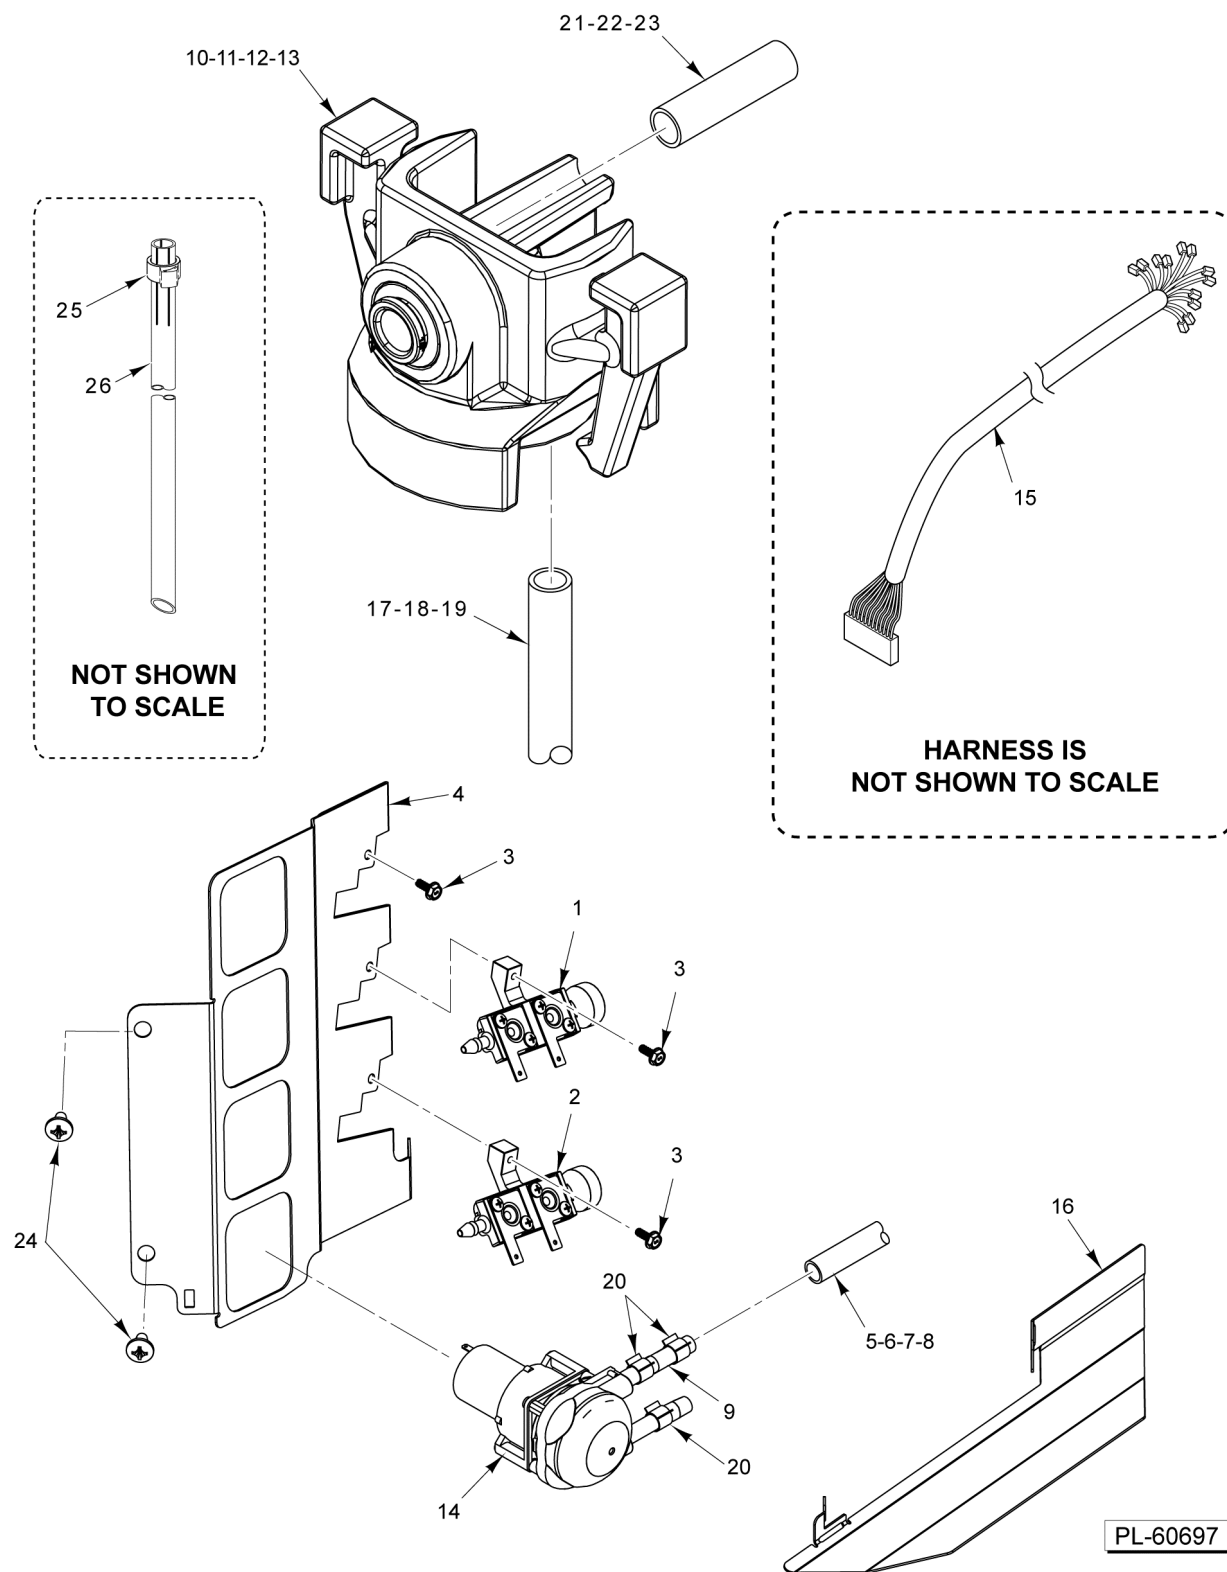 

CHEMICAL PUMPS AND SENSORS

CHEMICAL PUMPS AND SENSORS


ILLUS. PL-60697	PART NO.	NAME OF PART	AMT.
1	0P-658541	Sensor (Chemical) (Detergent/Sanitizer).....	1
2	0P-658542	Sensor (Chemical) (Rinse Aid).....	1
3	0P-678388	Self-Tapping Screw.....	3
4	0A-108427	Bracket - Chemical Pump.....	1
5	0P-688365	Tubing (Clear) (9.5 In.) (Pump to Sanitizer).....	AR
6	0P-688366	Tubing (Clear) (12.5 In.) (Pump to R/A Cold).....	AR
7	0P-688367	Tubing (Clear) (15 In.) (Pump to R/A Hot).....	AR
8	0P-688368	Tubing (Clear) (30 In.) (Pump to Delime Cold).....	AR
9	0P-688531	Tubing (Used on Welco Pumps Only).....	AR
10	0A-108515	Cap - Chemical Bottle.....	AR
11	0A-108533	Cap Assy. - Chemical Bottle (Detergent) (Incls. Items 10, 17, & 21).....	AR
12	0A-108534	Cap Assy. - Chemical Bottle (Rinse Aid) (Incls. Items 10, 18, & 22).....	AR
13	0A-108535	Cap Assy. - Chemical Bottle (Sanitizer) (Incls. Items 10, 14, & 20).....	AR
14	0P-418406	Pump - Chemical (Blue) (Incls. Item 9).....	AR
15	0P-458469	Harness - Wire (Chemical Pumps & Sensors).....	1
16	0A-108540	Drip Pan.....	1
17	0P-688369	Tubing (Red) (12.25 In.).....	AR
18	0P-688371	Tubing (Blue) (12.25 In.).....	AR
19	0P-688370	Tubing (Clear) (12.25 In.).....	AR
20	0P-688362	Clamp - Spring Action Hose.....	3
21	0P-688372	Tubing (Red) (1 In.).....	AR
22	0P-688374	Tubing (Blue) (1 In.).....	AR
23	0P-688373	Tubing (Clear) (1 In.).....	AR
24	0P-678348	Self-Tapping Screw 1/4-20 x 3/8 Phil. Pan Hd., Type TT.....	2
25	0P-688032	Clamp - Hose 7/16.....	1
26	0A-108033	Stand Pipe 20-1/2 Lg.....	1

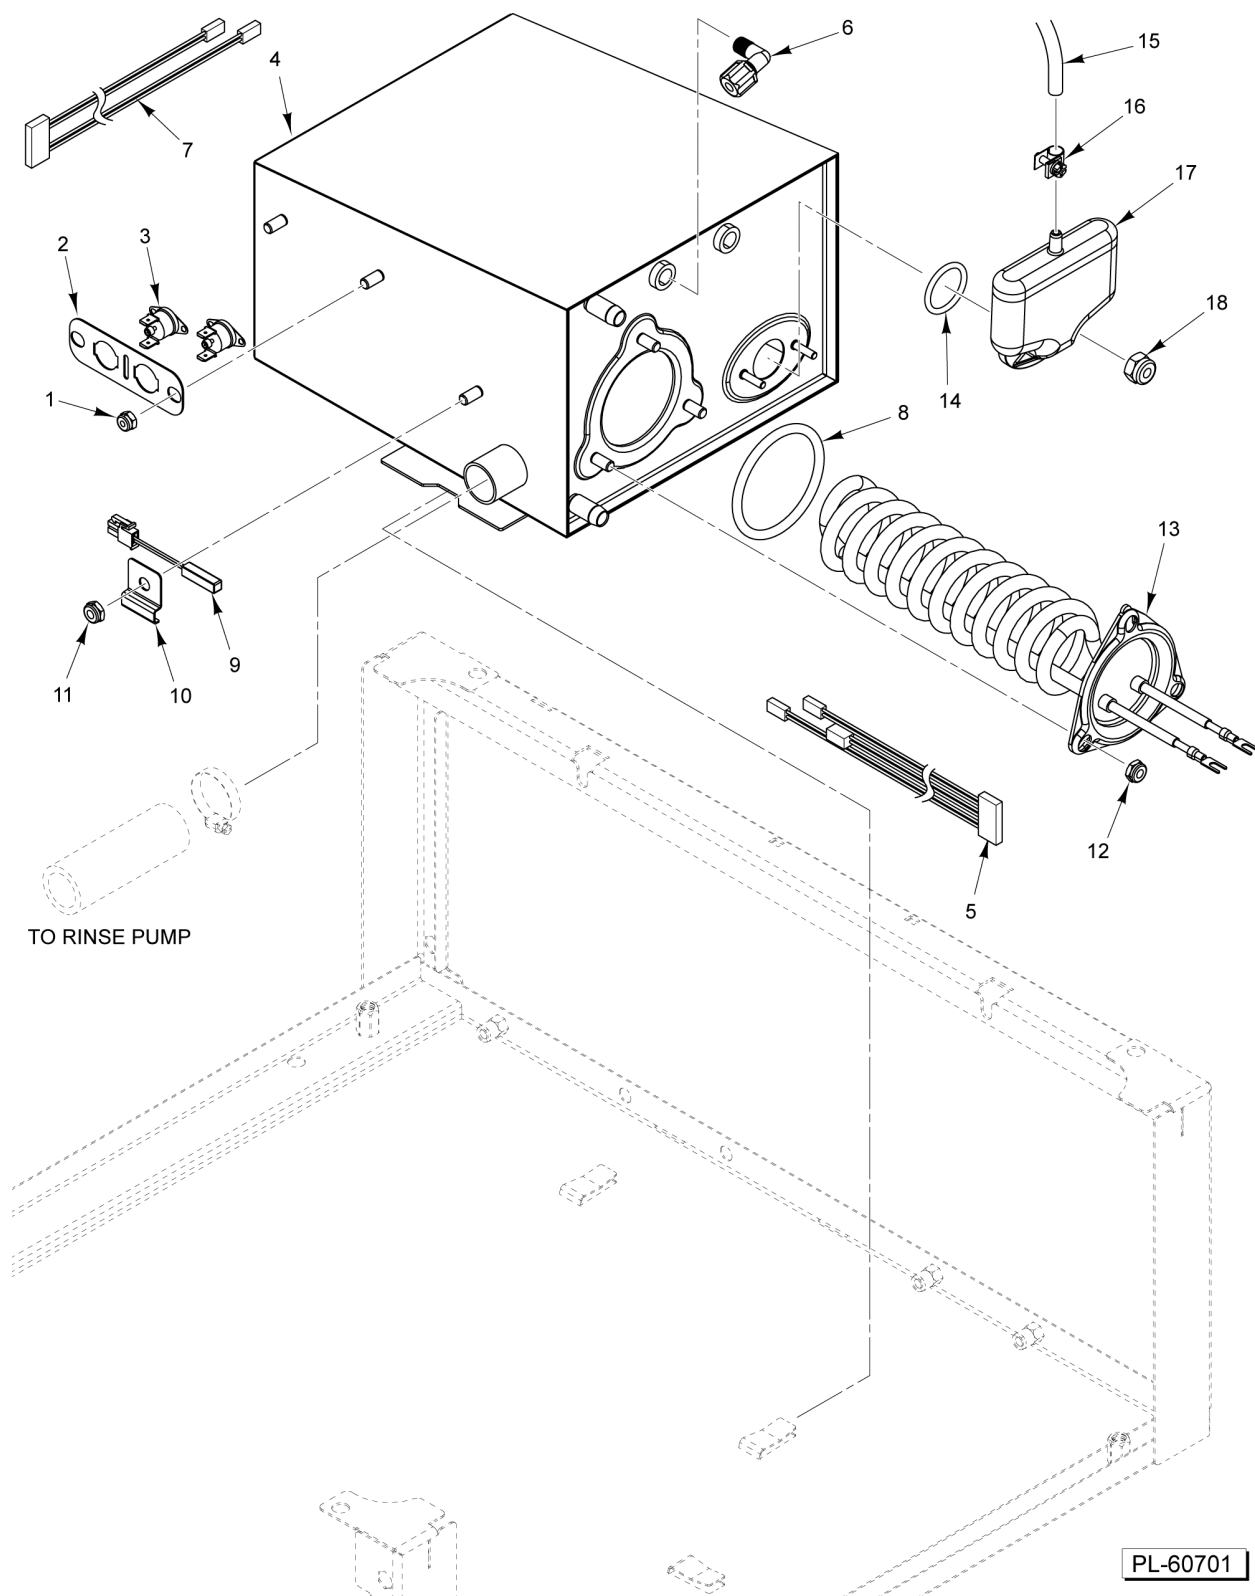 

**BOOSTER ASSEMBLY
(HOT) (SU-H)**

BOOSTER ASSEMBLY (HOT) (SU-H)


ILLUS. PL-60701	PART NO.	NAME OF PART	AMT.
1	0P-678143	Stop Nut 1/4-20 Hex (SST).....	2
2	0A-108402	Bracket - High Limit.....	1
3	0P-658504	Protector - High Limit.....	2
4	0P-648438	Booster.....	1
5	0P-458471	Harness - Wire (Temperature Probes).....	1
6	0P-678562	Fitting - Tube 1/4.....	1
7	0P-458470	Harness - Wire (High Limit).....	1
8	0P-578174	O-Ring.....	1
9	0P-658423	Thermistor.....	1
10	0A-108451	Back - Thermistor.....	1
11	0P-678143	Stop Nut 1/4-20 Hex (SST).....	1
12	0P-678143	Stop Nut 1/4-20 Hex (SST).....	3
13	0P-558433	Element - Heater (208-240 V., 1 Ph.).....	1
14	0P-578564	O-Ring.....	1
15	0P-688537	Kit - Tubing (Incls. Item 16) (Cut to 28 In.).....	1
16	0P-688362	Clamp - Spring Action Hose.....	2
17	0A-108501	Trap - Air.....	1
18	0P-678143	Stop Nut 1/4-20 Hex (SST).....	2

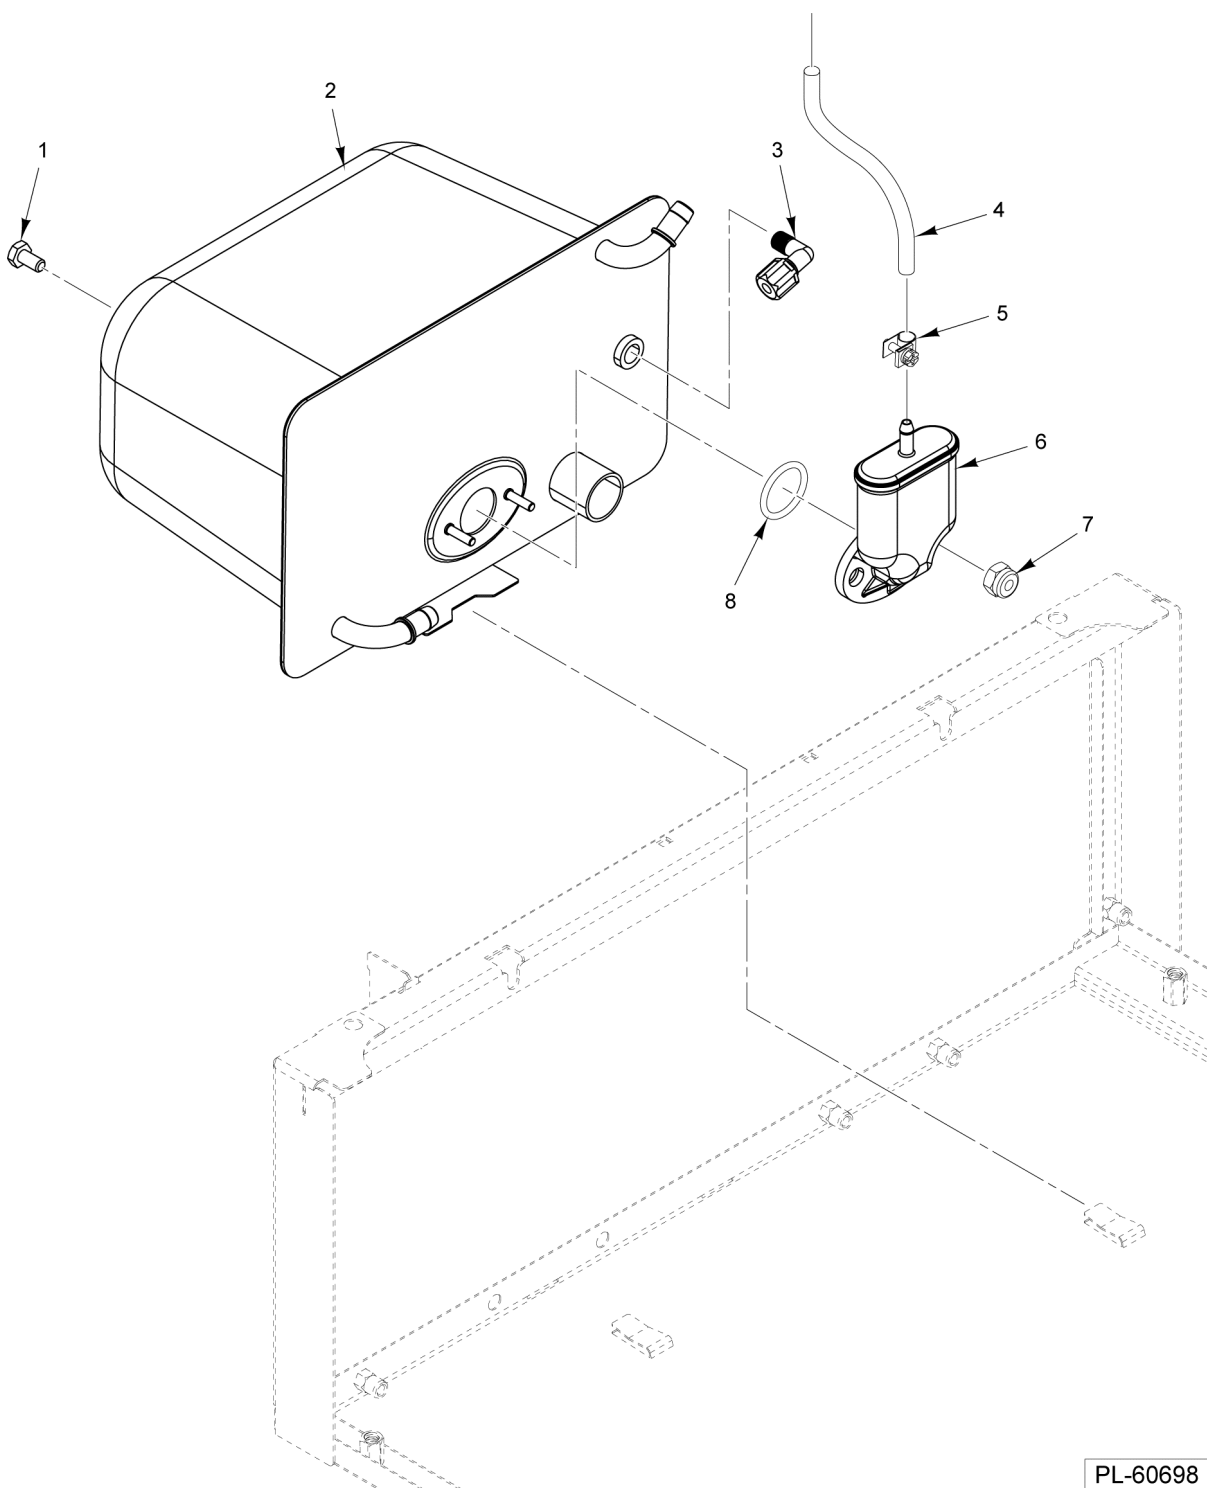 

**RECOVERY TANK ASSEMBLY
(COLD) METAL TANK
(SU-L & SG)**

**RECOVERY TANK ASSEMBLY
(COLD) METAL TANK
(SU-L & SG)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60698			
1	0P-678568	Cap Screw 1/4-20 x 1/2 Hex Hd. (SST).....	2
2	0P-648432	Booster - Recovery.....	1
3	0P-678562	Fitting - Tube 1/4.....	1
4	0P-688537	Kit - Tubing (Incls. Item 5) (Cut to 33 In.).....	1
5	0P-688362	Clamp - Spring Action Hose.....	2
6	0A-108501	Trap - Air.....	1
7	0P-678143	Stop Nut 1/4-20 Hex (SST).....	2
8	0P-578564	O-Ring.....	1

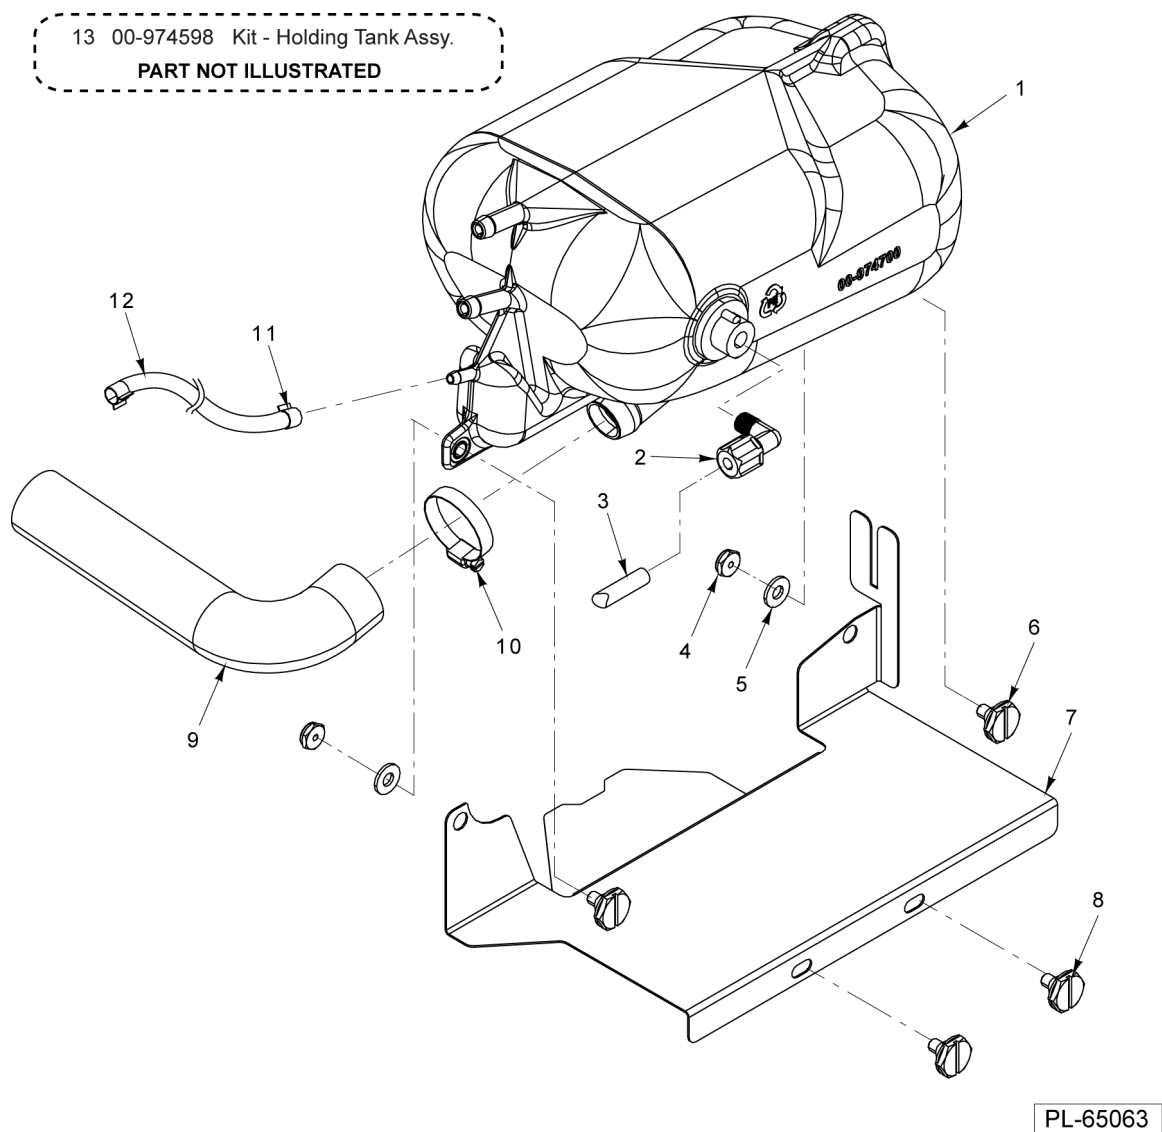 


**RECOVERY TANK ASSEMBLY
(COLD) MOLDED TANK
(SU-L & SG)**

**RECOVERY TANK ASSEMBLY
(COLD) MOLDED TANK
(SU-L & SG)**


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65063			
1	0A-108613	Tank - Recovery.....	1
2	0P-678562	Fitting - Tube 1/4.....	1
3	0P-688614	Tube - Pump to Recover Assy.....	1
4	0P-678143	Stop Nut 1/4-20 Hex (SST).....	2
5	0P-678170	Washer (SST).....	2
6	0P-678148	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST).....	2
7	0A-108615	Mount - Booster.....	1
8	0P-678342	Cap Screw 1/4-20 x 1/2 Hex Hd. (SST).....	2
9	0P-688616	Hose - Rinse Pump Inlet.....	1
10	0A-108384	Clamp - Hose.....	1
11	0P-688362	Clamp - Spring Action Hose.....	2
12	0P-688612	Tube - PVC (28").....	1
*13	0A-108611	Kit - Holding Tank Assy. (Incls. Items 1 thru 12).....	1

 * Order Kit to Replace SST Tank Only. Order Failed Components if Molded Tank

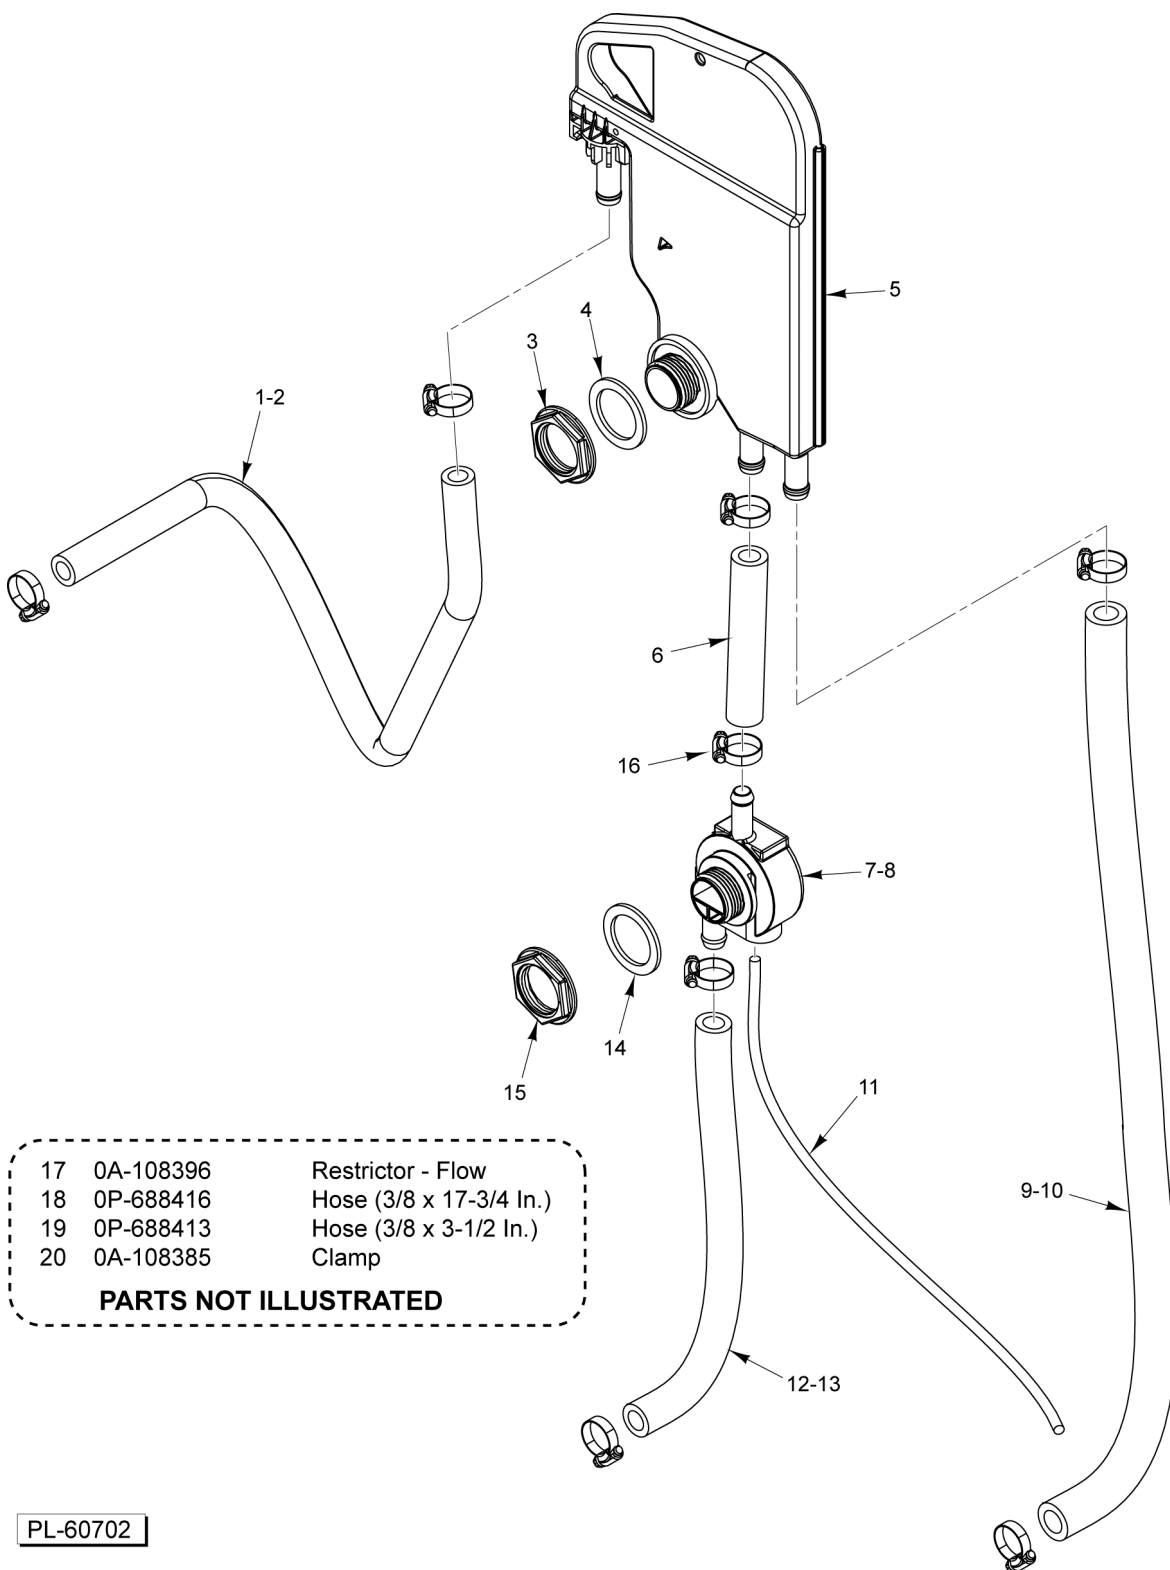

FILL AIR GAP (SU-H & SU-L)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60702			
1	0P-688410	Hose 3/8 (23.62 In. Lg.).....	AR
2	0P-688415	Hose 3/8 (15 In. Lg.).....	AR
3	0A-108363	Nut - Adapter.....	2
4	0P-678482	Washer - Air Gap.....	2
5	0A-108548	Air Gap.....	1
6	0P-688413	Hose 3/8 (3.5 In. Lg.).....	AR
7	0A-108435	Adapter - Chemical.....	1
8	0A-108436	Adapter - Chemical (SU-L).....	1
9	0P-688411	Hose 3/8 (19.25 In. Lg.) Hose 3/8 (19.88 In. Lg.).....	AR
10	0P-688414	Hose 3/8 (25 In. Lg.).....	AR
11	0P-688364	Tubing (Clear) (17.5 In.).....	AR
12	0P-688412	Hose 3/8 (9 In. Lg.) (SU-H).....	AR
13	0P-688412	Hose 3/8 (9 In. Lg.) (SU-L).....	AR
14	0P-678482	Washer - Air Gap.....	1
15	0A-108363	Nut - Adapter.....	1
16	0A-108385	Clamp.....	8
17	0A-108396	Restrictor - Flow.....	1
18	0P-688416	Hose 3/8 (17.75 In. Lg.).....	1
19	0P-688413	Hose 3/8 (3.5 In. Lg.).....	1
20	0A-108385	Clamp.....	1

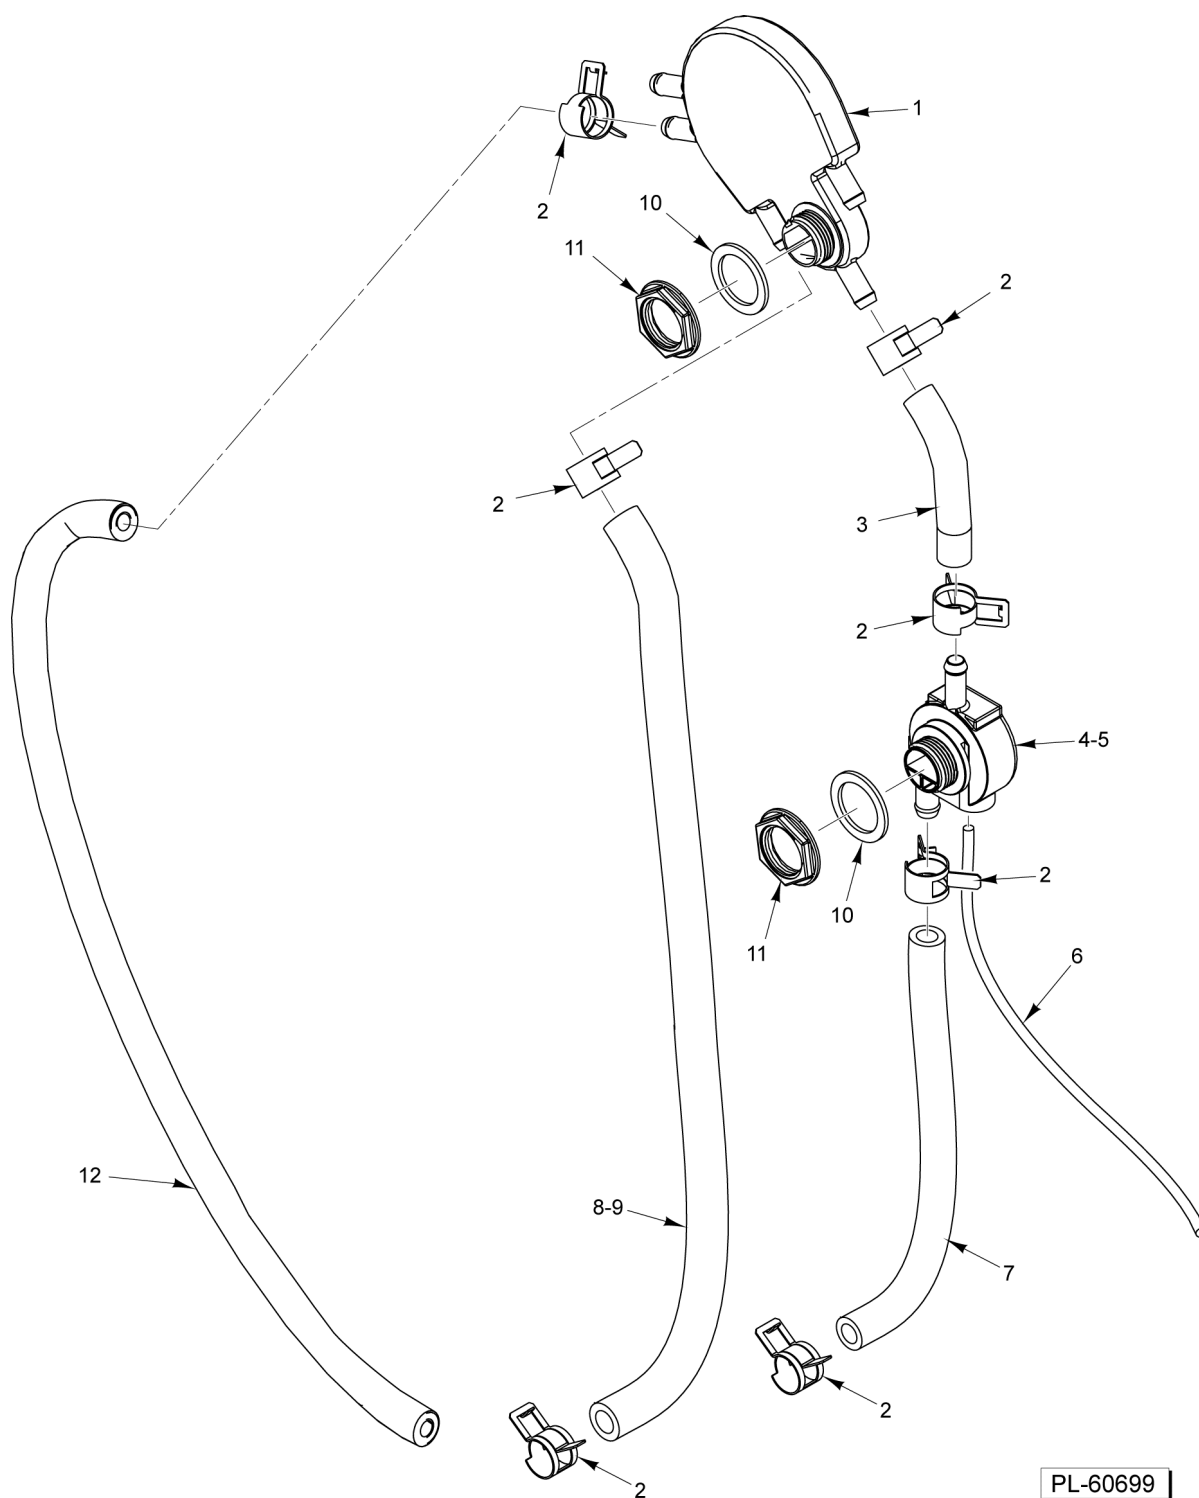 

PL-60699

FILL AIR GAP (SG)

FILL AIR GAP (SG)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60699			
1	0A-108536	Fill - Air Assy. (Incls. Label).....	1
2	0A-108385	Clamp.....	AR
3	0P-688417	Hose 3/8 (3.75 In. Lg.).....	AR
4	0A-108435	Adapter - Chemical.....	1
5	0A-108436	Adapter - Chemical (Cold).....	1
6	0P-688364	Tubing (Clear) (17.5 In.).....	AR
7	0P-688412	Hose 3/8 (9 In. Lg.).....	AR
8	0P-688411	Hose 3/8 (19.25 In. Lg.) Hose 3/8 (19.88 In. Lg.)	AR
9	0P-688418	Hose 3/8 (28 In. Lg.).....	AR
10	0P-678482	Washer - Air Gap.....	2
11	0A-108363	Nut - Adapter.....	2
12	0P-688410	Hose 3/8 (23.62 In. Lg.).....	AR

